MX-FS9000

PREMIUM HI-FI Component System

MP3/WMA/CD-DA Playback with CD/USB

user's manual

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service,
please register your product at

www.samsung.com/register

SAMSUNG

Safety Warnings

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.	**CAUTION** : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.	This symbol indicates important instructions accompanying the product.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.
- Use only a properly grounded plug and receptacle.
  - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM (IEC 60825-1)
- THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CLASS 1	**LASER PRODUCT**
KLASSE 1	**LASER PRODUKT**
LUOKAN 1	**LASER LAITE**
KLASS 1	**LASER APPARAT**
PRODUCTO	**LÁSER CLASE 1**

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.
Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

DANGER :

- Complies with 21CFR 1040.10 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007
- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR)

- An administration fee may be charged if either
  a. an engineer is called out at your request and there is no defect in the product (i.e. where you have failed to read this user's manual)
  b. you bring the unit to a repair centre and there is no defect in the product (i.e. where you have failed to read this user's manual).
- The amount of such administration charge will be advised to you before any work or home visit is carried out.

Important Information on Use

Precautions

- Ensure that the AC power supply in your house complies with the identification sticker located on the back of your product.
- Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7.5~10cm).
- Do not place the product on amplifiers or other equipment which may become hot. Make sure the ventilation slots are not covered.
- Do not stack anything on top of the product.
- Before moving the product, ensure the Disc Insert Hole is empty.
- In order to disconnect the product completely from the power supply, remove the AC plug from the wall outlet, especially when left unused for a long period of time.
- During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the product.
- Do not expose the product to direct sunlight or other heat sources. This could lead to overheating and malfunction of the product.
- Protect the product from moisture, and excess heat or equipment creating strong magnetic or electric fields (i.e. speakers.).
- Disconnect the power cable from the AC supply if the product malfunctions. Your product is not intended for industrial use.
- Use of this product is for personal use only.
- Condensation may occur if your product or disc has been stored in cold temperatures. If transporting the product during the winter, wait approximately 2 hours until the product has reached room temperature before using.
- The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.
- Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- Direct the loudspeakers towards the listening area.

Cautions On Handling And Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause skipping.

Be especially careful not to scratch discs when handling them.

Holding Discs

- Do not touch the playback side of the disc.
- Hold the disc by the edges so that fingerprints will not get on the surface.
- Do not stick paper or tape on the disc.

Disc Storage

- Do not keep in direct sunlight.
- Keep in a cool ventilated area.
- Keep in a clean Protection jacket.
  Store vertically.
- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

Handling and Storing Discs

If you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc
- Condensation may form if warm air comes into contact with cold parts inside the product. When condensation forms inside the product, it may not operate correctly. If this occurs, remove the disc and let the product stand for 1 or 2 hours with the power on.

Disc Types And Disc Format

This product does not support Secure (DRM) Media files.

CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
  Do not use CD-R discs over 700MB/80 minutes as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3/WMA Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".wma" extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 999 files can be played per CD.
- Supported Audio Formats(Bit Rate):WMA 56~128kbps, MP3 80~320kbps

Contents

Contents

Thank you for buying this SAMSUNG Hi-Fi Component system.
Please take time to read these instructions.
They will allow you to operate your system with ease and take full advantage of its features.

Safety Warnings **2**

Important Information On Use **3**
- Precautions 3
- Cautions On Handling And Storing Discs 3
- Disc Types And Disc Format 3

Accessories **4**

Description **5**
- Front Panel 5
- Rear Panel 6
- Remote Control 7
  - Installing Batteries In The Remote Control 7
- Connecting the Speakers 8
- Attacking the speaker foot 8

Basic Functions **9**
- Display Function 9
- Playing CD 9
  - Loading Compact Disc 9
  - CD/MP3/WMA-CD Playback 9
  - Selecting a Track 10
  - Searching a Track/Folder Quickly 10
  - Searching For Specific Music Passage on a CD 10
  - Repeat one or All Tracks on the CD 10
  - A-B Repeat Playback 10
  - CD Programming 10
  - Checking or Editing the Programmed Track 11
- Playing USB 11
  - Before You Begin! 11
  - To Select a File from USB Device 11
  - To Use High Speed Search 11
  - To Delete a File 11
  - To Skip Next 10 Files 12
  - Move FOLDER 12
  - How to safely remove the USB device 12
  - Before Using the USB Storage 12
- Bluetooth 12
  - What is Bluetooth? 12
  - To connect the Hi-Fi Component to a Bluetooth device 12
  - To disconnect the Bluetooth device from Hi-Fi Component 13
  - To disconnect Hi-Fi Component from the Bluetooth device 13
- Using My Karaoke 13
- 10 Skip Function 14
- Auto Change Function 14
- Listening a Radio 14
  - To Store the Stations You Want 14
  - Selecting a Stored Station 14

Advanced Functions **15**
- Timer Function 15
  - Setting the Clock 15
  - Setting the Timer 15
  - Cancelling the Timer 16
- Recording Function 16
  - Basic Recording 16
  - Recording Speed 17
- Special Sound Effect 17
  - Selecting EQ Mode 17
  - Using the FOOTBALL Mode 17
  - GIGA SOUND Function 17
  - BEAT WAVING Function 18
  - DJ BEAT Function 18
  - Booting Sound Function 18

Troubleshooting **19**

Specifications **20**

Symbols Important Note

Accessories

Check for the supplied accessories below.

- Figures and illustrations in this User's Manual are provided for reference only and may differ from actual product appearance.

Description

Front Panel

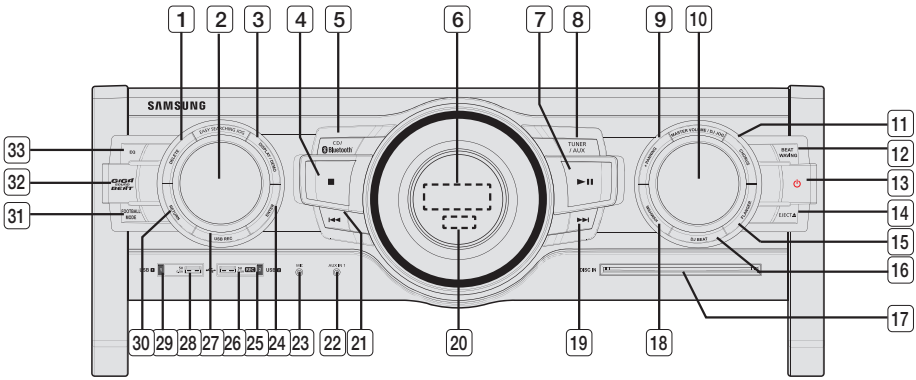

1. DELETE button
2. EASY SEARCHING JOG
3. DISPLAY/ DEMO button
4. STOP button
5. CD/ Bluetooth button
6. Display Panel
7. PLAY/PAUSE button
8. TUNER/AUX button
9. +PANNING button for DJ BEAT sound effect
10. MASTER VOLUME/DJ JOG control
11. CHORUS button for DJ BEAT sound effect
12. BEAT WAVING button
13. POWER button
    - Press this button to switch your product on or off.
14. EJECT button
15. FLANGER button for DJ BEAT sound effect
16. DJ BEAT button
17. DISC slot
18. WAHWAH button for DJ BEAT sound effect
19. FORWARD SEARCH/SKIP button
20. REMOTE CONTROL SENSOR
21. BACKWARD SEARCH/SKIP button
22. AUX IN 1 jack
    Connecting an external device such as an MP3 player.
    - Connect AUX IN 1 on the front panel of the product to the Audio Out of the external device/MP3 player.
    - Press the **TUNER/AUX** button to select the AUX1.
23. MIC jack
24. ENTER button
25. USB 2 SELECT button
26. USB 2 jack for Playing and USB Recording
27. USB REC button
28. USB 1 jack for only Playback
29. USB 1 SELECT button
30. RETURN button
31. FOOTBALL MODE button
32. GIGA SOUND BEAT button
33. EQ button

Description

Rear Panel

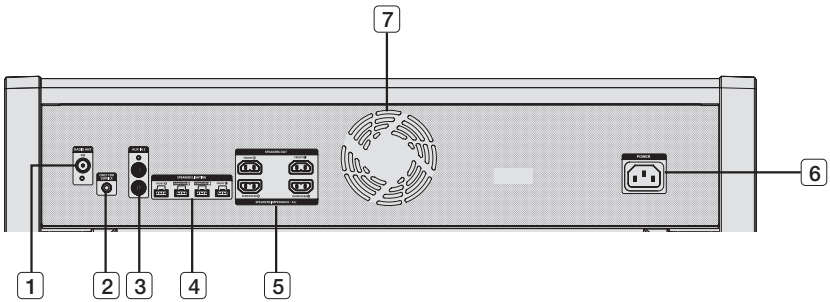

1. FM Antenna Connector Terminal

1. Connect the FM antenna to the FM antenna connector terminal.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.
3. If reception is poor, you may need to install an outdoor antenna. To do so, connect an outdoor FM antenna to the FM antenna connector terminal of the product using a 75Ω coaxial cable (not supplied).

2. ONLY FOR SERVICE

- This jack is just for testing, please don't use it.

3. AUX IN 2 Terminals

1. Use the Audio Cable (not supplied) to connect AUX IN 2 on the product to Audio Out on the external analog output device.
   - Be sure to match connector colors.
   - If the external analog output device has only one Audio Out jack, connect either left or right.
   - Press the **TUNER/AUX** button to select the AUX 2.
   - If no button actions for more than 8 hours in AUX mode, the power will automatically turn off.

4. LED Terminals for Speaker Beat Waving.

5. 2.2 CH Speaker Terminals

The speakers connector terminals are located on the rear of the product.

1. To achieve the correct sound quality, insert those speaker connectors to the same color of the speaker terminals system.
   - LEFT channel (marked L, White/Purple).
   - RIGHT channel (marked R, Red/Purple).
   - Don't plug in the Purple SUBWOOFER connector to White or Red terminal by force.

6. POWER

- Insert only the provided power cable.

7. Cooling fan

- The fan operates while the unit is powered on. If set to the minimum volume, the fan won't operate.
  Secure a minimum 10 cm of clear space from all sides of the fan when installing the product.

Remote Control

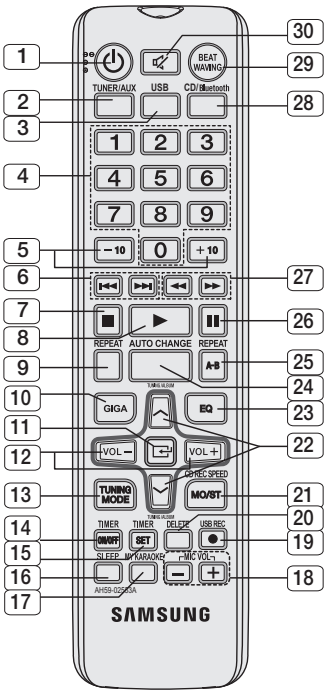

1. POWER
2. TUNER/AUX
3. USB
4. Number(0~9) button
   During playback, press the desired track number. The selected track is played.
5. SKIP(-10, +10)
6. SKIP
7. STOP
8. PLAY
9. REPEAT
10. GIGA
11. ENTER
12. VOLUME(-,+)
13. TUNING MODE
14. TIMER ON/OFF
15. TIMER SET
16. SLEEP
    Set a sleep time to shut off the product.
17. MY KARAOKE
18. MIC VOLUME -, +
19. USB REC
20. DELETE
21. Mono/Stereo for FM, CD REC SPEED for CD Ripping
22. TUNING/ALBUM ∧,∨
23. EQ
24. AUTO CHANGE
25. REPEAT A-B
26. PAUSE
27. SEARCH
28. CD/Bluetooth
29. BEAT WAVING
30. MUTE
    Turn off the sound temporarily.

Installing Batteries In The Remote Control

- Place batteries in the remote control so they match the polarity : (+) to (+) and (–) to (–).
- Do not dispose of batteries in a fire.
- Do not short circuit, disassemble or overheat the batteries.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The remote control can be used up to approximately 23 feet (7 meters) in a straight line.

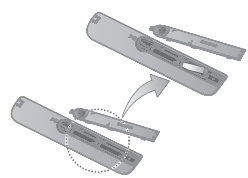

* Battery size: AAA

Connecting the Speakers

Recommended speaker setup.

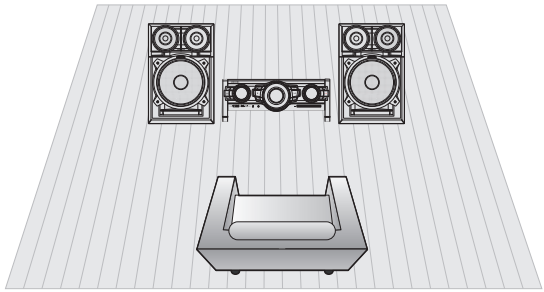

☛ The product may not operate properly if not installed in accordance with recommended speaker setup, or exposed to shaking or external shocks.

☛ Do not extend wires of the speakers, and do not pressed or peeled off them with a heavy object.

Attaching the speaker foot

Attach the supplied speaker foot at rear corner on the bottom of the speaker to stabilize the speakers and to prevent them from slipping.

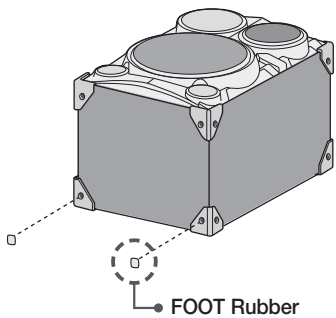

Display function

You can view all functions available on the display, adjust the brightness of the display and select the Display/LED either on or off.

Each time you press the **DISPLAY/DEMO** button on the display mode will change as following:

- **The Dimmer function**
  The Dimmer function is selected and the display darkens.
- **LED OFF**
  The LED is turned off while the dimmer function is working.
- **Clock ON**
  The Clock you set is displayed.
- **Display/LED ON**
  All display and LED turned on.

➢ **The DEMO Music function**
Press DISPLAY/DEMO button for 5 seconds to play demo music.
When you press the DISPLAY/DEMO button, the function operates as follows:
DIMMER → LED Off (unit/speaker) → **--:--** [time display] → LED On (unit/speaker)

- To cancel the Demo Music mode
  - Press the DISPLAY/DEMO button for 5 seconds. The current mode is canceled and the product is turned off.
  - Press TUNER/AUX, CD/Bluetooth or USB button. The current mode is canceled and the mode is changed to the mode you selected.
- While playing DEMO Music, all buttons will not work except ⏻ [Power], VOL, 🔇 [MUTE] and buttons mentioned above.
- If you connect speaker to AUX1 while displaying DEMO, sound is produced through AUX1 and you can use the VOL buttons and 🔇 [MUTE].

Playing CD

Loading Compact Disc

You can play 12 cm compact compact disc that requires no adapter.

1. Insert a disc gently into the disc slot with the disc's label facing up and then disc will be played automatically.
   - You can load or unload compact discs when the radio, USB or auxiliary source function is selected, and when you press the **EJECT** button, all of the other functions will be changed to the CD mode.
   - If no buttons are pressed on the product or remote control for more than 3 minutes when the product is in Pause mode, it will be changed to Stop mode.
   - If no buttons are pressed on the product or remote control for more than 25 minutes when the product is in Stop mode, the power will automatically turn off.

CD/MP3/WMA-CD Playback

☛ This product is designed to play an audio CD, CD-R, CD-RW, MP3/WMA-CD.

1. Insert a disc gently into the disc slot with the disc's label facing up.
2. The disc will be played automatically.
   - For MP3/WMA-CD audio, it may take several minutes to complete scanning the disc tracks.
   - If you play a file with an English name or a MP3/WMA-CD medium in an English title, the song title will be shown in the display. (Other languages besides English may not be indicated.)
   - An English-titled track containing a special character will not show the title in the display.

<CD Playback Display>



3. Adjust the volume according to needs with the following procedures.
   - Turn the **VOLUME** control on the product.
   - Press the **VOL +** or **VOL -** button of the remote control. The volume level can be adjust in 31 steps(VOLUME MIN, VOLUME01~ VOLUME 29, and VOLUME MAX).
4. Main Unit
   To pause playback temporarily, press the ▶II button. Press ▶II again to continue playing the disc.

   Remote control
   To pause playback temporarily, press the **PAUSE**(II) button.
   Press **PLAY**(▶) button to continue playing the disc.
5. To end playing, press the **STOP** (■) button.

- If there is not a CD inserted it is indicated as "NO DISC".
- The quality of MP3/WMA-CD playback may vary depending on the condition of the disc containing the music files or the condition of the recorder with which the disc was created.
- If different types of files or unnecessary folders are on the same disc, you will have problems with playback.

➢ Gently insert a CD into the disc slot and do not apply excessive force.
- Do not put force or place a heavy object on the product.
- Do not insert an out-of-spec. shape of CD such as a heart or octangle shaped CD. Otherwise, the product may be damaged.
- Care must be taken about maintenance of the compact discs.

Selecting a Track

You can select a desired track while the disc is being played.

To play the previous track

Press the ⏮ button within 3 seconds after the current track started playing.
Press the ⏮ button twice at least 3 seconds after the current track started playing.

To play the next track

Press the ⏭ button.

To play the current track

Press the ⏮ button 3 seconds later after the current track started playing.

To play the track of your choice

Press the ⏮ or ⏭ button to move to a desired track.

- You can also use the number (0~9) button on the remote control to select a track.

Searching a Track/Folder Quickly

You can select a track/folder directly without the ⏮, ⏭ button.

CDDA/MP3-CD/WMA-CD

1. Turn the **EASY SEARCHING JOG** control on the product to the left or right to select a desired track.
   - You can move to the selected track directly.
2. When the searching is done, the track will automatically start playing.

Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

Forward Search..... ▶▶
Backward Search ..... ◀◀

You can also press and hold the ⏮, ⏭ button on the product to automatically scan for a track.

Repeat One or All Tracks on the CD

You can repeat playing CD unlimitedly:

- CD containing a specific track.
- Whole tracks of a CD.

1. Press the **REPEAT** button on the remote control.
   Each time you press the **REPEAT** button, the repeat mode will change as following:

   MP3: OFF → TRACK → DIR → ALL → RANDOM

   CD: OFF → TRACK → ALL → RANDOM
2. When you wish to stop the repeat function, press the **REPEAT** button until "**OFF**" is displayed.
   - **OFF**: Cancels repeat playback.
   - **TRACK**: Repeatedly plays the selected track.
   - **DIR** (DIRECTORY): Repeatedly plays all tracks in the selected directory.
   - **ALL**: Repeatedly plays the entire disc.
   - **RANDOM**: Plays tracks in random order.

A-B Repeat Playback

You can repeatedly play back a designated section of a CD.

1. Press the **REPEAT A-B** button at the beginning of desired part.
   - **'RPT A'** will be displayed.
2. Press the **REPEAT A-B** button at the ending of desired part.
   - **'RPT AB'** will be displayed.
3. To cancel **REPEAT A-B** function, press the **REPEAT A-B** button again.
   - **'OFF'** will be displayed.

➢ REPEAT A-B function is available within a track.

CD Programming

This function is not available during playback of an MP3/WMA-CD.

- You can program the playback order of up to 24 tracks of your choice.
- However, you must stop playing the CD before selecting tracks.

1. While in CD playback mode, press the **STOP**(■) button to stop playing the CD.
2. Press the **ENTER ( )** button to display the message below:

   PROG 01 TRACK---

   (01= program number, ---= track number)

3. Use the ⏮ or ⏭ button to move to a desired track.
   - Press ⏮ to move to the previous track.
   - Press ⏭ to move to the next track.
4. Press the **ENTER (⏎)** button to confirm your selection, the selection is stored and PROG 02 TRACK--- is displayed.
5. To select a different track, following the steps 3 to 4 above.
6. Press the **PLAY** (▶) button to play the programmed tracks.
7. Press the **STOP**(■) button to stop playing the programmed tracks, Press the **STOP** (■) button again to cancel playing the programmed tracks.
   - If you eject the disc or turn off the product or change other function mode, your programming will be canceled.

Checking or Editing the Programmed Track

You can check a list of programmed tracks and edit them as you want.

1. If a programmed track is being played, press the **STOP**(■) button once.
2. Press the **ENTER (⏎)** button twice to display the message below:
   SAVED 01 TRACK 002
   (01= program number, 002= track number)
3. Repeat pressing the **ENTER (⏎)** button until the desired track is displayed.
4. Press the ⏮ or ⏭ button to select a different track.
5. Press the **ENTER (⏎)** button to confirm your selection.
6. To play the programmed tracks, press the **Play** (▶) button.

Playing USB

Connect an external storage device such as USB flash memory or external HDD (Hard Disk Drive) to the product. You can play files in MP3/WMA format.

Before you begin!

1. Connect the external USB storage device to your product.
2. Select the USB mode by pressing the **USB 1 or USB 2** button on the product or the **USB** button on the remote control.
3. The first file of the first directory plays automatically.
4. To stop playing
   Press the **STOP** (■) button to stop playing.

   ➢ **To remove the USB device**
   If you press the **STOP** (■) button once again, you can remove the USB device safely.

   ☛ Do not connect a USB recharger to the USB port of this product. Otherwise, the product may be damaged.

To Select a File from USB Device

You can select an MP3 file during the play.

➢ If you want to move the next/previous(file), press the ⏮,⏭ buttons shortly.
- It moves the next/previous file within the directory.
- If you press the ⏮,⏭ buttons more times than the number of the files in the directory, it will move over to the next directory.

<u>To repeat</u>

1. Press the **REPEAT** button.
   Each time you press the **REPEAT** button, the repeat mode will change as following:
   OFF → TRACK → DIR → ALL → RANDOM
2. When you wish to stop the repeat function, press the **REPEAT** button until **"OFF"** is displayed.
   - **OFF**: Cancels repeat playback.
   - **TRACK**: Repeatedly plays the selected file.
   - **DIR**(DIRECTORY): Repeatedly plays all files in the selected folder.
   - **ALL**: Repeatedly plays all files.
   - **RANDOM**: Plays files in random order.

To Use High Speed Search

You can search the desired section quickly during the play.

1. Press the ◀◀,▶▶ button.
   - Each time you press the button, you will move forward/backward fast.

☛ The sound will not output in high speed search.

To Delete a File

You can delete a file in your USB device.

1. Select a file you want to delete.
2. Press the **DELETE** button.
3. Press ⏮,⏭ buttons on the product and remote control to select **YES/NO**.
   - To cancel the selection, press the **RETURN** button on the product.

4. Press the **ENTER** button on the remote control.
   The selected file will be deleted.

☛ The NTFS file system is not supported.

To Skip Next 10 Files

1. Press the **+10** or **-10** button while in playback mode. This will skip the files as many as 10 or -10 from the current file.

Move FOLDER

Press the remote control's **TUNING/ALBUM** ∧,∨ button to move to the previous/next folder.

How to safely remove the USB device

1. Press the (■) button twice while the USB is playing and press the (■) button once when it is at a block state.
2. If a **REMOVE** message appears on screen, remove the USB device.

Before Using the USB Storage

- Some USB devices may not work properly with this product.
- This product supports only an external HDD that is formatted in FAT file system.
- USB 2.0 HDD should be connected to a separate power source. Otherwise, the USB 2.0 HDD will not work at all.
- If an USB external storage is connected to multiple devices, only the MP3 files in the first HDD will be played.
- DRM-applied files are not supported. Digital Right Management: This will restrict unauthorized access to a DRM file so that the copyright of the file is protected from piracy.
- Even if the extension of the file is .mp3, the file cannot be played if it is formatted in MPEG layer 1 or 2.
- Do not use an unrecognized USB hub.
- Only the first 15 characters of a MP3/WMA file are displayed.
- Only removable HDDs with less than 160GB are supported. Depending on the device, a 160GB- or more removable HDD may not be supported.
- It will take several minutes to recognize the files in the selected USB device.
- The USB device (USB HDD, in particular) may cause a delay to move to the next file.
- The USB storage supporting only USB VER1.1 may perform a slow access or may not recognize the file properties.
- The maximum current supported by an external USB device via each USB port is 0.5A (based on DC 5V).
- A certain USB, digital camera device, USB card reader, iPod, iPhone or Smart Phone may not be supported.

Bluetooth

You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!

What is Bluetooth?

Bluetooth is a technology that enables Bluetooth compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
- A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Hi-Fi Component.
- It is subject to electrical variation from obstructions caused by a wall, corner, or office partitioning.
- It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Hi-Fi Component with the Bluetooth device while they are close together.
- The further the distance is between Hi-Fi Component and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the set. The connection will be automatically cut off if the distance is out of this range. Even within this range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

To connect the Hi-Fi Component to a Bluetooth device

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

1. Press the **CD/Bluetooth** button of the Hi-Fi Component to display the **BLUETOOTH** message.
   - You will see WAIT for a while and then READY on the front display of the Hi-Fi Component.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select the Stereo headset menu on the Bluetooth device.
   - You will see a list of scanned devices.
4. Select "**[Samsung] HI-FI XXXXXX**" from the list.
   - When the Component is connected to the Bluetooth device, it will display **CONNECTED → BLUETOOTH** on the front display.

- If the Bluetooth device has failed pair with the Component, delete the previous "[Samsung] HI-FI XXXXXX" found by the Bluetooth device and make it search for the component again.

5. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the Hi-Fi Component system.
   - In **Bluetooth** mode, some model's Play/Repeat/Stop/Next/Back functions are not available.

➢ The product only supports Middle Quality SBC data (up to 237kbps@48kHz), and does not support High Quality SBC data (328kbps@44.1kHz).

- The AVRCP feature is not supported.
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect to a Bluetooth device that supports only the HF (Hands Free) function.
- Only one Bluetooth device can be paired at a time.
- Once you have turned off Hi-Fi Component and the pairing is disconnected, the pairing will not be restored automatically. To reconnect, you must pair the device again.
- Search or connection may not be performed properly by Hi-Fi Component in the following cases.
  - If there is a strong electrical field around Hi-Fi Component.
  - If several Bluetooth devices are simultaneously paired with Hi-Fi Component.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.

To disconnect the Bluetooth device from Hi-Fi Component

You can disconnect the Bluetooth device from Hi-Fi Component. For instructions, see the Bluetooth device's user manual.

- Hi-Fi Component will be disconnected.
- When Hi-Fi Component is disconnected from the Bluetooth device, Hi-Fi Component will display **DISCONNECTED → READY** on the front display.

To disconnect Hi-Fi Component from the Bluetooth device

Press the **CD/Bluetooth** button on the front panel of Hi-Fi Component to switch from Bluetooth mode to another mode or turn off Hi-Fi Component.

- The connected Bluetooth device will wait a certain time for a response from Hi-Fi Component before terminating the connection.(Disconnection time may differ, depending on the Bluetooth device)
- The currently connected device will be disconnected.

➢ In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Hi-Fi Component and the Bluetooth device exceeds (5 meters).

- If the Bluetooth device comes back into the effective range and then again connect after disconnecting, you can restart to restore the pairing with the Bluetooth device.
- Hi-Fi Component automatically turns off after 25 minutes in the Ready state.

Using My Karaoke

You can use MY Karaoke function to sing along with your favorite CDs and USB.

1. Connect the microphone to the MIC jack on the front of the product.
   - If your microphone jack is larger than 3.5 (ø) MIC jack, you need a Connector-Adaptor(optional) to complete the connection.
   - First, connect the Connector-Adaptor to the MIC jack on the front of the product,
   - Second, connect the microphone (with larger jack) to the Connector-Adaptor.
2. Press the **MIC VOL-, +** button on the remote control to adjust the volume of the microphone.
3. Press the **MY KARAOKE** button on the remote control to suppress the vocal if you need. Each time the button is pressed, the selection is changed as follows:
   MY KARAOKE ON → MY KARAOKE OFF
   - If you hear strange noises (squealing or howling) while using the Karaoke feature, move the microphone away from the speakers. Turning down the microphone's volume or the speaker volume is also effective. Do not set the MICROPHONE towards the SPEAKER.
   - The microphone does not operate in the AUX and TUNER mode.
   - If you connect with the Microphone, GIGA SOUND will automatically turn off. Even if you remove the microphone, it will not turn on.

- When My Karaoke is on, EQ/GIGA SOUND and FOOTBALL MODE does not work.
- After the stop operation, the setting of my karaoke will disappear.
- Only when connected with a Microphone, the my karaoke function is available.

10 Skip Function

Press the +10 or -10 button on the remote control while in playback mode. This will skip the tracks as many as 10 or -10 from the current track.

Auto Change Function

You can circularly play between the disc and the USB.

1. Press the **AUTO CHANGE** button on the remote. Each time press this button, the mode will switch as following:

   AUTO CHANGE ON → AUTO CHANGE OFF

   - When the **AUTO CHANGE** mode is "**ON**",
     - the music will be played on **DISC → USB1 → USB2** continuously.
     - if you press the **POWER** button, function change button or the **EJECT** button, the **AUTO CHANGE** function automatically switches to "**OFF**" mode.
     - the recording can't work.
     - the **REPEAT**, **SLEEP** function can't work and automatically changes to **OFF**.
     - the **CD REC SPEED**, **USB REC**, **NUMBER KEY** and **DELETE** function can't work.
   - When USB is playing, if you disconnected the USB, the **AUTO CHANGE** function automatically switches to "**OFF**" mode.
   - If there's no USB1, it will jump to USB2.

Listening a Radio

To Store the Stations You Want

You can store up to:

15 FM stations.

1. Select **FM** by pressing the **TUNER/AUX** button.
2. To search for a station by the preset mode or the manual mode, press the **TUNNING MODE** button on the remote control or the **STOP** button on the product.
   - **Preset** : Once or more times until PRESET is displayed. You can search the stored frequencies in the preset mode.
   - **Manual** : Once or more times until MANUAL is displayed. You can search the frequencies one by one in the Manual mode.
3. Select the station to be stored by:
   - Pressing the **TUNING/ALBUM** ∧ or ∨ button on the remote control to select the preset station.
4. Press the **MO/ST** button to switch between stereo and mono.
   - In a poor reception area, select **MONO** for a clear, interference-free broadcast.
   - This applies only when listening to an FM station.
5. If you do not want to store the radio station found, revert to Step **3** and search for another station. Otherwise:

   a. Press the **ENTER** button.

   b. Or, press the **TUNING/ALBUM** button on the remote control to select a program number.

   c. Press the **ENTER** button to save the preset.
6. To store any other radio frequencies required, repeat Steps **3** to **4**.

➢ **In Tuner mode**

- In the Manual mode, you can use ⏮ or ⏭ button or the **EASY SEARCHING JOG** control.
- In the Preset mode, you can use ⏮ or ⏭ button or the **EASY SEARCHING JOG** control on the product to search a stored radio station.

Selecting a Stored Station

You can listen to a stored radio station as following:

1. Select **FM** by pressing the **TUNER/AUX** button on the product and remote control.
2. Press the **TUNING MODE** button on the remote control until "**PRESET**" is displayed.
3. Press ⏮,⏭ button on the main unit or **TUNING/ALBUM** ∧ , ∨ on the remote control to select a desired preset number.

   or

   Turn the **EASY SEARCHING JOG** control left or right on the main unit to select the stored station.

Timer Function

Setting the Clock

For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

1. Press the **TIMER SET** button on the remote control twice, "**CLOCK SET**" is displayed.
2. Press the **ENTER (↵)** button on the remote control, the hour flashes.
   - Increase the hours: ∧
   - Decrease the hours: ∨
3. When the correct hour is displayed, press the **ENTER (↵)** button and then the minutes flashes.
   - Increase the minutes: ∧
   - Decrease the minutes: ∨
4. When the correct minute is displayed, press the **ENTER (↵)** button and then "**TIMER PLAY SET**" appears in the display.

Setting the Timer

The timer enables you to switch the product on or off at specific times automatically.

- Before setting the timer, check that the current time is correct.
- For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.
- If you no longer want the product to be switched on or off automatically, you must cancel the timer by pressing the **TIMER ON/OFF** button.

Example: You wish to wake up to music every morning.

1. Press the **TIMER SET** button until **TIMER PLAY SET** is displayed.
2. Press the **ENTER (↵)** button.
   Result: **ON TIME** is displayed for a few seconds, you can set the timer switch-on time.
3. Set the timer switch-on time.
   a Press the **TUNING/ALBUM** ∧ or ∨ button to set the hours.
   b Press the **ENTER (↵)** button.
   Result: The minutes flash.
   c Press the **TUNING/ALBUM** ∧ or ∨ button to set the minutes.
   d Press the **ENTER (↵)** button.
   Result: **OFF TIME** is displayed for a few seconds, you can now set the timer switch-off time.
4. Set the timer switch-off time.
   a Press the **TUNING/ALBUM** ∧ or ∨ button to set the hours.
   b Press the **ENTER (↵)** button.
   Result: The minutes flash.
   c Press the **TUNING/ALBUM** ∧ or ∨ button to set the minutes.
   d Press the **ENTER (↵)** button.
   Result: **VOLUME XX** is displayed, where **XX** corresponds to the volume already set.
5. Press the **TUNING/ALBUM** ∧ or ∨ button to adjust the volume level and press the **ENTER (↵)** button.
   Result: The source to be selected is displayed.
6. Press the **TUNING/ALBUM** ∧ or ∨ button to select the desired source to be played when the product switches on.

If you select...	You must also...
FM (radio)	a Press the **ENTER (↵)** button. b Select a preset station by pressing the **TUNING/ ALBUM** ∧ or ∨ button.
CD (compact disc)	Load a compact disc.
USB	Connect the USB device.

7. Press the **ENTER (↵)** button.
   Result: **TIMER REC SET** (Do you want to record?) is displayed.
8. Press the **ENTER (↵)** button.
   Result: **REC SET YES/NO** is displayed, you can press the **TUNING/ALBUM** ∧ or ∨ button to select the **REC YES** or **REC NO**, and then press **ENTER** button.

1) If you select the **REC NO**, it will cancel tuner timer recording even if you have already set the tuner timer recording.

2) If you select the **REC YES**, you can set the tuner timer recording.

a. Press the **ENTER (↵)** button.
Result: **ON TIME** is displayed for a few seconds, you can set the tuner timer recording switch-on time.

b. Press the **ENTER (↵)** button.
Result: **OFF TIME** is displayed for a few seconds, you can set the tuner timer recording switch-off time.

- The maximum time of tuner and aux timer recording is 5 hours.
- If the timer switch on and off times are identical, the word **ERROR** is displayed.
- You may use ⏮, ⏭ buttons on the product instead of the **TUNING/ALBUM** ∧ or ∨ button to adjust in step 3 to 8.
- If the switch-on or -off time is the same as the timer recording time, only the switch-on or -off time is effective, and the timer recording is not applied.
- If the auto timer is turned on,the CD or USB function may require an additional step to be activated depending on the disc(or device). So it is better for you to select the tuner function instead.
- If you select CD or USB mode when there is no disc or no USB in the product, it will automatically change to TUNER.

Cancelling the Timer

After having set the timer, it will start automatically as shown by the TIMER ON message on the display. If you no longer wish to use the timer, you must cancel it.

To cancel the timer, Press the **TIMER ON/OFF** button once.
To restart the timer, Press the **TIMER ON/OFF** button once again.

- When you select the TIMER OFF mode, the TIMER RECORDING and TIME function are not available.

Recording Function

Basic Recording

You can record sound of the CD, USB, the Radio Broadcasting, and the external source into the USB storage device.

1. Connect the external USB storage device you want to record to the USB (⇜ REC) on your product. Music does not play back during file copy.
2. Play a disc or USB, adjust the radio frequency or connect the external source to your product.

   CD
   - Press the **CD** on the product to select the CD function.
   - Insert a CD gently into the disc slot.
   - Use the CD selection (⏮ or ⏭) buttons to select the desired song.

   TUNER
   - Select FM by pressing the **TUNER/AUX** button.
   - Adjust the Radio frequency you want to record.

   USB 1
   - Connect the USB device including original files USB device to USB 1 jack.
   - Press the **USB** button to select USB 1.
   - Play a song from the USB 1.

   External Source
   - Connect an External device/MP3 player to the product.
   - Press the **TUNER/AUX** button to select <AUX IN 1 or AUX IN 2>.
   - Play a song from the external device.
3. Press the **USB REC** button on the remote control to start recording.

   CD
   - Track recording message is displayed and CD recording starts.
   - If you want to record the all tracks of disc, press and hold the **USB REC** button. Then, Full CD recording message will be displayed.

   RADIO
   - Tuner recording message is displayed and recording starts.

   CD-ROM/ USB
   - "FILE COPY" is displayed and recording starts.
   - You can also copy a folder including MP3/WMA files to USB 2 device. if you press and hold the USB REC button while the system play an MP3 or WMA file in the folder, your system may show "FOLDER COPY".
   - If you play the MP3 or WMA file, the file will be copied into the USB device. Your system may show "FILE COPY".

     When the recording is done, "STOP" will be displayed.
   - If there is the same file name when you copy, "EXIST FILE" is displayed, and the function is canceled.
   - When a microphone is connected to the product if you press the USB REC button, it activates the MP3 Recording not Copy function.
   - When shortly pressing a USB REC button, the file copy starts and when shortly pressing a USB REC button for seconds, the folder copy starts.

   External Source
   - AUX recording message is displayed and recording starts.

   CD/USB1(MP3) & MIC
   - MP3 recording message is displayed and recording starts.
4. To stop recording, press the **STOP** (■) button and then automatically create and save as the MP3 file.
5. After the recording, a directory named "RECORDING"(CD-DA), "CD COPY"(CD-ROM/ USB(WMA/MP3)), "TUNER RECORDING", "AUX RECORDING" or "MP3 RECORDING" will be created in your device.

- The WMA/MP2 file just can be copied not recorded.
- Do not disconnect the USB or the AC Cord during the recording as this may cause file damage.
- If you disconnected USB device during the recording, the product will be power off and you may not delete the recorded file, In this case, please connect the USB device to the PC and backup the USB data on the PC first and then format the USB device.
- When the USB memory is not enough, it will be displayed "NOT ENOUGH MEMORY".
- The recording works if the USB device or the HDD is formatted in the FAT file system. (The NTFS file system is not supported.)
- When you use CD high speed search function, the CD recording can't work.
- Sometimes, the recording time may be longer with some USB devices.
- In the program mode, you can't use the CD recording function.
- When all recording, the EQ and GIGA SOUND functions can not work and automatically change to OFF.
- When the CD recording, the REPEAT function can not work and automatically changes to OFF.
- If you use the MIC function during the CD recording, the voice from the microphone will be recorded.
- You can not record the radio when searching or no available frequencies in the Tuner mode.
- Note that setting the input level too loud when recording music from an external device through the AUX and USB channel may introduce noise into the recording. In that case, lower the external device's volume level.

Recording Speed

Each time you press the CD REC SPEED button on the remote control, the recording speed will change as following:

RECORD SPEED x 1 ➞ RECORD SPEED x 4

- While the tuner or external source is recording, the recording speed does not supported.
- When you select RECORD SPEED x 4, the audio sound will not be output.
- If you connected the microphone, you just have one recording speed mode: RECORD SPEED x 1.
- During recording, if you disconnect the microphone, the recording will stop, even if you reconnect the microphone, it will still stop.

Special Sound Effect

Selecting EQ Mode

Your product supports the predefined equalizer settings between high and low frequencies to be in harmonious with the current music genre.

1. Press the **EQ** button.
   Each time you press this button, the sound mode will switch as following:
   OFF➞FLAT➞ARABIC MUSIC➞PERSIAN MUSIC➞ PARTY➞POP➞HIP HOP➞ROCK➞JAZZ➞CLASSIC ➞ELECTRONIC➞MP3 ENHANCER➞ VIRTUAL SOUND➞USER EQ
2. If you want to set the **USER EQ** mode, select the **USER EQ**, then press the **ENTER** button. You can set the **BASS**, **MID**(Middle) and **TREB**(Treble) level.
   Result: The BASS level(left numeric) flash.
   Press the **TUNING/ALBUM** ∧ or ∨ button to select from -06 to 06.
   Press the **ENTER** button.
   Result: The MIDDLE level(middle numeric) flash.
   Press the **TUNING/ALBUM** ∧ or ∨ button to select from -06 to 06.
   Press the **ENTER** button.
   Result: The TREBLE level(right numeric) flash.
   Press the **TUNING/ALBUM** ∧ or ∨ button to select from -06 to 06.
   Press the **ENTER** button.
   Result: setting is completed.
   - When all recording, the EQ function can't work and the EQ automatically switches to "OFF" mode.
   - If no buttons is pressed within 8 seconds, your settings will automatically be cancelled and the previous settings will be saved.
   - The EQ mode may be different depending on your region.

Using the FOOTBALL Mode

You can directly select the football mode for listening a sports broadcasting in realism.

1. Press the **FOOTBALL MODE** button on the product.
   Each time you press the button, the sound mode will switch as following:
   FOOTBALL OFF ➞ FOOTBALL MODE 1 ➞ FOOTBALL MODE 2
   - The FOOTBALL mode may be different depending on your region.

GIGA SOUND Function

Your product is equipped with the function of GIGA SOUND mode.
The function of GIGA SOUND mode amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

1. Press the **GIGA SOUND BEAT** button on the main unit or the **GIGA** button on the remote control.
   Each time press this button, the sound will switch as following:
   GIGA SOUND BEAT ➞ GIGA SOUND OFF
2. To cancel this function, press the **GIGA SOUND BEAT** button until the "**OFF**" is displayed.
   - The **GIGA SOUND** mode may be different depending on your region.

BEAT WAVING Function

You can switch the Speaker LED mode to your preference.

1. Each time you press the **BEAT WAVING** button on the product, the Speaker LED display mode will change as following:
   PARTY 1 ➞ PARTY 2 ➞ FUN 1 ➞ FUN 2 ➞ PURE ➞ FRESH ➞ LOVE ➞ JOY ➞ SUNSET ➞ SUNRISE ➞ NATURE 1 ➞ NATURE 2 ➞ WAVE 1 ➞ WAVE 2 ➞ AURORA ➞ OFF
   - If you select the **BEAT WAVING OFF**, all of the speaker LED Lightings will turn off.

DJ BEAT Function

It sets FLANGER, PANNING, CHORUS, WAHWAH sound effect and the level of each effect is adjustable.

☛ The set scope is [-15 ~ +15] and the initial set up value are all 0.

FLANGER : It creates a vibration that is equal to the jet's rise/fall.

PANNING : It increass the left/right speaker's output by turn and makes it sound like it is moving from side to side.

WAHWAH : It sounds like 'Wah~ Wah~'.

CHORUS : It creates a vibration like a singing a chorus.

1. To set the desired effect, press one of the **FLANGER**, **PANNING**, **CHORUS**, **WAHWAH** button of the product.
   - The blue LED turns on around the relevant button and the **DJ BEAT** button.
   - You can control the level of effect that was set to Volume Jog.
     In order to control the volume, press the product's **DJ BEAT** button.
   - To cancel the set effect, press the relevant button once more.
   - To change the set effect, press the desired effect button.
   - The **PANNING** effect can be set with the **FLANGER**, **CHORUS**, **WAHWAH** effect in duplicate.
   - To set the **PANNING** effect in duplicate, press the **PANNING** button when another effect is set up or press another effect button when the **PANNING** effect has been applied.
   - Use Volume JOG to control the level of effect that was set up at the end.
   - To control the level of effect that was previously set, press the button of effect that was set up at the end and cancel the last effect first.

Booting Sound Function

If you set the booting sound, you can feel the magnificent audio output of the product while it boots up.

1. Press the product's **GIGA SOUND BEAT** button or the remote control's **GIGA** button for a long time.
   - The **BOOTING SOUND** menu appears on the display panel.
2. Press the product's **GIGA SOUND BEAT** button or the remote control's **GIGA** button for a long time to turn **ON** or **OFF** the **BOOTING SOUND**.

Troubleshooting

Refer to the chart below when this product does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the product, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

Symptom	Check/Remedy
I cannot eject the disc.	• Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
Playback does not start immediately when the Play/Pause button is pressed.	• Are you using a deformed disc or a disc with scratches on the surface? • Wipe the disc clean.
Sound is not produced.	• No sound is heard during fast playback, slow playback, and step motion playback. • Are the speakers connected properly? Is the speaker setup correctly customized? • Is the disc severely damaged?
The remote control does not work.	• Is the remote control being operated within its operation range of angle and distance? • Are the batteries drained?
• The product is not working. (Example: The power goes out or the front panel key doesn't work or a strange noise is heard.) **• The product is not working normally.**	• While “NO DISC” message appears on the display of the product, press and hold the **STOP** (■) button on the product for longer than 5 seconds with no disc (**RESET** function). Using the **RESET** function will erase all stored settings. Do not use this unless necessary.
Can't receive radio broadcast.	• Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.

Specifications

Specifications

General	Weight	Main unit	8 Kg
		Speaker	70 Kg
	Dimensions	Main unit	588 (W) X 238 (H) X 388 (D)
		Speaker	588 (W) X 882 (H) X 577 (D)
	Operating Temperature Range		+5°C~+35°C
	Operating Humidity Range		10 % to 75 %
FM Tuner	Signal/Noise ratio		55 dB
	Usable sensitivity		10 dB
	Total harmonic distortion		1 %
CD Disc	CD : 12 cm (COMPACT DISC)		Reading Speed : 4.8 ~ 5.6 m/sec.
			Maximum Play Time : 74 min.
Amplifier	Front speaker output		640W/CH (4Ω)
	Subwoofer output		640W/CH (4Ω)
	Frequency range		22Hz~20KHz
	S/N Ratio		65 dB
	Channel separation		60 dB
	Input sensitivity		(AUX)800mV

*: Nominal specification
- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- Design and specifications are subject to change without prior notice.
- For information on the power supply and power consumption, refer to the label attached to the product.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) (021) 56997777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th
TAIWAN	0800-32-9999	www.samsung.com/tw
VIETNAM	1800 588 889	www.samsung.com
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786	www.samsung.com
ALGERIA	0800 100 100	www.samsung.com/n_africa
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/
TUNISIA	80-1000-12	www.samsung.com/n_africa
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant (English)
SYRIA	18252273	www.samsung.com/Levant (English)
IRAN	021-8255	www.samsung.com
MOROCCO	080 100 2255	www.samsung.com
SAUDI ARABIA	920021230	www.samsung.com/sa
TURKEY	444 77 11	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/
GHANA	0800-10077 0302-200077	
COTE D' IVOIRE	8000 0077	www.samsung.com/africa_fr/
SENEGAL	800-00-0077	
CAMEROON	7095- 0077	
KENYA	0800 545 545	www.samsung.com
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860-SAMSUNG (726-7864)	www.samsung.com
BOTSWANA	8007260000	www.samsung.com
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

MX-FS9000

نظام PREMIUM Hi-Fi Component

تشغيل MP3/WMA/CD-DA باستخدام CD/USB

دليل المستخدم

إمكانيات **هائلة**

نشكرك على شراء هذا المنتج من منتجات Samsung.
للحصول على مجموعة الخدمات الكاملة،
يرجى تسجيل المنتج الخاص بك على
www.samsung.com/register

SAMSUNG

تحذيرات السلامة

لتقليل مخاطر التعرض لصدمة كهربية، لا تفك الغطاء (أو الجزء الخلفي).
لا توجد بداخل الجهاز أجزاء يمكن للمستخدم صيانتها. يُرجى الرجوع لموظفي الصيانة المؤهلين لإجراء عملية الصيانة.

يشير هذا الرمز إلى "جهد كهربي خطير" بداخل المنتج يشكل خطر الصدمة الكهربائية أو الإصابة البدنية.	**تنبيه** : لتجنب حدوث صدمة كهربية، قم بمطابقة سن القابس العريض مع الفتحة الواسعة، ثم أدخله بالكامل.	يشير هذا الرمز إلى الإرشادات المهمة المصاحبة لهذا المنتج.

تحذير

- للحد من خطر نشوب حريق أو حدوث صدمة كهربية، لا تعرض هذا الجهاز إلى المطر أو الرطوبة.

تنبيه

- يجب عدم تعريض الجهاز للرذاذ أو القطرات وعدم وضع أي أنية تحتوي سوائل، مثل أنية الزهور، على الجهاز.
- يستخدم قابس التيار الرئيسي كجهاز لفصل التيار الكهربي ويجب أن يظل جاهزًا للتشغيل في أي وقت.
- استخدم قابسًا ومقبسًا مؤرضين بشكل صحيح
  - فالتأريض غير الصحيح يمكن أن يتسبب في حدوث صدمة كهربائية أو تلف المعدات. (المعدات من الفئة I فقط)
- ينبعث إشعاع ليزر مرئي وغير مرئي من فئة 3B عند الفتح. فتجنب التعرض للشعاع (IEC 60825-1)
- يستخدم هذا المنتج الليزر. وقد يؤدي استخدام عناصر التحكم أو التعديلات أو تنفيذ إجراءات غير تلك المبينة في هذا الدليل إلى التعرض لإشعاع خطير. لا تفتح الغطاء ولا تقوم بالإصلاح بنفسك. اسند عمليات الصيانة والخدمة إلى فني مؤهل.

رزيل چتنم	1 ةئفلا
LASER PRODUKT	KLASSE 1
LASER LAITE	LUOKAN 1
LASER APPARAT	KLASS 1
LÁSER CLASE 1	PRODUCTO

منتج ليزر من الفئة 1

مشغل الأقراص المدمجة هذا مصنف كمنتج ليزر من الفئة 1.
وقد يؤدي استخدام عناصر التحكم أو التعديلات أو تنفيذ إجراءات غير تلك المبينة في هذا الدليل إلى التعرض لإشعاع خطير.

خطر:

- متوافق مع 21CFR 1040.10 باستثناء الاختلافات طبقًا لإخطار الليزر رقم 50، بتاريخ 24 يونيو، 2007.
- ينبعث إشعاع ليزر مرئي وغير مرئي عند الفتح. تجنب التعرض للشعاع. (FDA 21 CFR)

معلومات مهمة حول الاستخدام

الاحتياطات

- تأكد من توافق مصدر التيار المتردد في منزلك مع ملصق التعريف الموجود على ظهر المنتج.
- قم بتركيب المنتج بشكل أفقي، على سطح مناسب (أثاث)، مع ترك مساحة كافية حوله لتوفير التهوية (من 7.5 إلى 10 سم).
- لا تضع المنتج على المكبرات أو غيرها من الأجهزة التي ربما ترتفع درجة حرارتها. تأكد من عدم تغطية فتحات التهوية.
- لا تضع أي شيء أعلى المنتج.
- قبل تحريك المنتج، تأكد من أن فتحة إدخال القرص فارغة.
- افصل المنتج تمامًا عن مصدر الطاقة، قم بإخراج قابس التيار المتردد من منفذ التيار الكهربي بالحائط، وبخاصة عند ترك المنتج بدون استخدام لفترة طويلة.
- عند هبوب العواصف الرعدية، افصل قابس التيار المتردد من منفذ التيار الكهربي بالحائط. من الممكن أن يؤدي ارتفاع الجهد الكهربي إلى إتلاف المنتج.
- لا تعرض المنتج إلى ضوء الشمس المباشر أو غير ذلك من مصادر الحرارة. فقد يؤدي ذلك إلى زيادة درجة حرارة المنتج بشكل كبير وتعطله.
- وفر الحماية للمنتج من الرطوبة والحرارة الزائدة أو المعدات التي تصدر مجالات مغناطيسية أو كهربية قوية (مثل السماعات).
- افصل كابل الطاقة من مصدر التيار المتردد في حالة تعطل المنتج. المنتج غير مخصص للاستخدام الصناعي.
- يتم استخدام هذا المنتج للأغراض الشخصية فقط.
- من الممكن أن يحدث تكاثف في حالة تخزين المنتج أو القرص في درجات حرارة منخفضة. في حالة نقل المنتج خلال فصل الشتاء، انتظر لمدة ساعتين تقريبًا حتى تصل درجة حرارة المنتج إلى درجة حرارة الغرفة قبل الاستخدام.
- تحتوي البطاريات المستخدمة مع هذا المنتج على مواد كيميائية مضرة بالبيئة. لا تتخلص من البطاريات بإلقائها في المهملات المنزلية العادية.
- حافظ على ترك مسافة مفتوحة تصل إلى 6 بوصات تقريبًا (15 سنتيمترًا) على جانبي الجهاز وخلفه، وذلك لأغراض التهوية.
- ضع السماعات على مسافة معقولة على أحد جانبي الجهاز وذلك لضمان الحصول على صوت استريو جيد.
- قم بتوجيه السماعات باتجاه منطقة الاستماع.

احتياطات حول التعامل مع الأقراص وتخزينها

قد تقلل الخدوش الصغيرة الموجودة على القرص من جودة الصوت والصورة أو تتسبب في التخطي.

احرص بوجه خاص على عدم تعرض الأقراص للخدش عند التعامل معها.

مسك الأقراص

- لا تلمس جانب تشغيل القرص.
- أمسك القرص من الحواف حتى لا تتطبع بصمات الأصابع على السطح.
- لا تلصق ورقًا أو شريطًا على القرص.

تخزين القرص

- لا تحتفظ به في ضوء الشمس المباشر.
- احتفظ به في منطقة باردة جيدة التهوية.
- احتفظ به في غلاف حماية نظيف وقم بتخزينه في وضع عمودي.
- لا تترك الأقراص تتلوث بالأتربة.
- لا تقم بتحميل أقراص معطوبة أو مخدوشة.

التعامل مع الأقراص وتخزينها

إذا وجدت بصمات أصابع أو أتربة على القرص، فقم بتنظيفه باستخدام منظف لطيف مخفف بالماء وامسحه بقطعة قماش ناعمة.

- عند التنظيف، امسح برفق من داخل القرص إلى خارجه
- قد يتكون تكاثف من الهواء الدافئ إذا لامس الأجزاء الباردة داخل المنتج. عند حدوث التكاثف داخل المنتج، فربما لا يعمل بشكل صحيح. فإذا حدث ذلك، فأخرج القرص ودع المنتج متوقفًا لمدة ساعة أو ساعتين في وضع التشغيل.

أنواع الأقراص وتنسيقاتها

لا يدعم هذا الجهاز ملفات وسائط DRM (إدارة الحقوق الرقمية) الآمنة.

أقراص CD-R

- قد تكون بعض أقراص CD-R غير قابلة للتشغيل وذلك بناءً على جهاز تسجيل القرص (مسجل القرص المضغوط أو الكمبيوتر الشخصي) وحالة القرص.
- استخدم أقراص CD-R سعة 650 ميجابايت/74 دقيقة
  لا تستخدم أقراص CD-R تزيد عن 700 ميجابايت/80 دقيقة حيث قد لا يمكن تشغيلها مرة أخرى.
- ربما تكون بعض وسائط CD-RW (القابلة لإعادة الكتابة) غير قابلة للتشغيل.
- يمكن أن تعمل أقراص CD-R التي "تم إغلاقها" بشكل صحيح بالكامل. إذا تم إغلاق الجلسة مع ترك القرص مفتوحًا، فقد لا تتمكن من تشغيل القرص بالكامل.

أقراص CD-R MP3/WMA

- يمكن فقط تشغيل أقراص CD-R مع ملفات MP3 بتنسيق ISO 9660 أو Joliet.
- يجب ألا تحتوي أسماء ملفات MP3 على مسافات فارغة أو أحرف خاصة (. / = +).
- استخدم الأقراص المسجلة بمعدل ضغط/إلغاء ضغط بيانات أكبر من 128 كيلو بت/ثانية.
- يمكن فقط تشغيل الملفات التي تحتوي على الامتدادين "mp3" و"wma".
- يمكن فقط تشغيل القرص متعدد الجلسات المكتوب دون توقف. إذا كان هناك جزء فارغ في القرص متعدد الجلسات، فيمكن تشغيل القرص فقط حتى يصل إلى الجزء الفارغ.
- إذا لم يتم إغلاق القرص، فسيستغرق وقتًا أطول حتى يبدأ التشغيل وقد لا يتم تشغيل جميع الملفات المسجلة.
- بالنسبة للملفات المشفرة بتنسيق معدل البت المتغير (VBR)، مثل الملفات المشفرة في كل من معدل البت المنخفض ومعدل البت المرتفع (على سبيل المثال، من 32 كيلو بت/ثانية إلى 320 كيلو بت/ثانية)، فقد يتم تخطي الصوت أثناء التشغيل.
- يمكن تشغيل 999 ملفًا لكل قرص مضغوط كحد أقصى.
- تنسيقات الصوت المدعومة (معدل البت): WMA من 56 إلى 128 كيلو بت/ثانية، MP3 من 80 إلى 320 كيلوبت/ثانية

المحتويات

المحتويات

نشكرك على شراء نظام Hi-Fi-Component هذا من سامسونج.
الرجاء الانتظار حتى قراءة هذه التعليمات.
فهي ستتيح لك إمكانية تشغيل النظام بكل سهولة بالإضافة إلى الاستفادة الكاملة من ميزاته.

تحذيرات السلامة ٢

معلومات مهمة حول الاستخدام ٣
الاحتياطات ٣
احتياطات حول التعامل مع الأقراص وتخزينها ٣
أنواع الأقراص وتنسيقاتها ٣

الملحقات ٤

الوصف ٥
اللوحة الأمامية ٥
اللوحة الخلفية ٦
وحدة التحكم عن بعد ٧
تركيب البطاريات في وحدة التحكم عن بعد ٧
توصيل السماعات ٨
توصيل أرجل تثبيت السماعات ٨

الوظائف الأساسية ٩
وظيفة العرض ٩
تشغيل القرص المضغوط ٩
تحميل القرص المضغوط ٩
تشغيل CD/MP3/WMA-CD ٩
تحديد مسار ١٠
البحث عن مسار/مجلد بسرعة ١٠
البحث عن مقطوعة موسيقية معينة
على قرص مضغوط ١٠
البحث عن عبارة موسيقية معينة على
القرص المضغوط ١٠
تشغيل تكرار A-B ١٠
برمجة القرص المضغوط ١٠
فحص أو تعديل المسار
الذي تمت برمجته ١١
تشغيل جهاز USB ١١
قبل أن تبدأ! ١١
لتحديد ملف من جهاز USB ١١
لاستخدام البحث عالي السرعة ١١
لحذف ملف ١١
لتخطي 10 ملفات قادمة ١٢
نقل المجلد ١٢
كيفية إزالة جهاز USB بأمان ١٢
قبل استخدام وحدة تخزين USB ١٢
بلوتوث ١٢
ما هي تقنية بلوتوث؟ ١٢
لتوصيل نظام Hi-Fi-Component
بجهاز بلوتوث ١٢
لفصل جهاز البلوتوث من نظام
Hi-Fi-Component ١٣
لفصل نظام Hi-Fi-Component
من جهاز البلوتوث ١٣
استخدام وظيفة My Karaoke (كاريوكي) ١٣
وظيفة تخطي 10 ..... ١٤
وظيفة التغيير التلقائي ١٤
الاستماع إلى الراديو ١٤
لتخزين المحطات التي تريدها ١٤
تحديد محطة مخزنة ١٤

الوظائف المتقدمة ١٥
وظيفة الموقت ١٥
ضبط الساعة ١٥
ضبط الموقت ١٥
إلغاء الموقت ١٦
وظيفة التسجيل ١٦
التسجيل الأساسي ١٦
سرعة التسجيل ١٧
التأثير الصوتي الخاص ١٧
تحديد وضع EQ (موازن الصوت) ١٧
استخدام وضع FOOTBALL (كرة القدم) ١٧
وظيفة GIGA SOUND (صوت جيجا) ١٧
وظيفة BEAT WAVING (تقلب الإيقاعات) ١٨
وظيفة DJ BEAT (إيقاع دي جي) ١٨
وظيفة صوت بدء التشغيل ١٨

استكشاف الأخطاء وإصلاحها ١٨

المواصفات ٢٠

الرموز هام ملاحظة

الملحقات

افحص الملحقات المزودة أدناه.

دليل المستخدم

وحدة التحكم عن بعد/ البطاريات

هوائي FM

كابل الطاقة

مطاط أرجل التثبيت

الميكروفون (MIC)

- تم توفير الأشكال والرسومات التوضيحية في دليل المستخدم هذا كمرجع فقط وقد تختلف هذه الأشكال والرسومات عن شكل المنتج الفعلي.

الوصف

اللوحة الأمامية

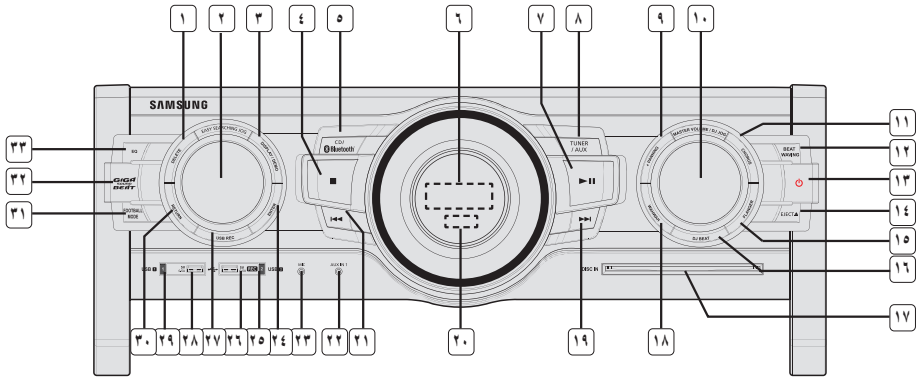

1. الزر DELETE (حذف)
2. مقبض البحث السريع
3. زر DISPLAY/ DEMO (العرض/العرض التوضيحي)
4. الزر STOP (إيقاف)
5. الزر CD/ Bluetooth (قرص مضغوط/بلوتوث)
6. لوحة العرض
7. الزر PLAY/PAUSE (تشغيل/إيقاف مؤقت)
8. الزر TUNER/AUX (موالف/إضافي)
9. زر +PANNING (التحريك+) للحصول على التأثير الصوتي DJ BEAT (إيقاع دي جي)
10. عنصر التحكم MASTER VOLUME/DJ JOG (مقبض مستوى الصوت الرئيسي/دي جي)
11. الزر CHORUS (كورس) للحصول على التأثير الصوتي DJ BEAT
12. زر BEAT WAVING (تقلب الإيقاعات)
13. زر الطاقة
    - اضغط على هذا الزر حتى يتسنى لك التبديل بين تشغيل المنتج أو إيقاف تشغيله.
14. الزر EJECT (إخراج)
15. زر FLANGER (فلانجر) للحصول على التأثير الصوتي DJ BEAT (إيقاع دي جي)
16. زر DJ BEAT (إيقاع دي جي)
17. فتحة القرص
18. الزر WAHWAH (واهواه) للحصول على التأثير الصوتي DJ BEAT (إيقاع دي جي)
19. زر البحث للأمام/التخطي
20. مستشعر وحدة التحكم عن بعد
21. زر بحث للخلف/تخطي
22. مقبس AUX IN 1 (مدخل إضافي 1)
    لتوصيل جهاز خارجي مثل مشغل MP3.
    - لتوصيل مقبس AUX IN 1 (مدخل إضافي 1) الموجود باللوحة الأمامية للمنتج في مخرج صوت الجهاز الخارجي/ مشغل MP3.
    - اضغط على الزر **TUNER/AUX** (موالف/إضافي) لتحديد AUX1.
23. مقبس MIC (الميكروفون)
24. الزر ENTER (إدخال)
25. الزر USB 2 SELECT (تحديد USB 2)
26. مقبس USB 2 للتشغيل وتسجيل USB
27. الزر USB REC (تسجيل USB)
28. مقبس USB 1 للتشغيل فقط
29. الزر USB 1 SELECT (تحديد USB 1)
30. الزر RETURN (رجوع)
31. الزر FOOTBALL MODE (وضع كرة القدم)
32. الزر GIGA SOUND BEAT
33. الزر EQ (موازن الصوت)

الوصف

اللوحة الخلفية

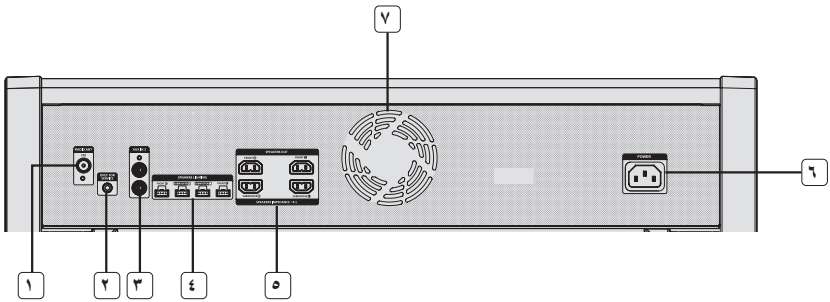

1. الوحدة الطرفية لموصل هوائي FM

1. لتوصيل هوائي FM بالوحدة الطرفية لموصل هوائي FM.
2. قم بتحريك سلك الهوائي ببطء حتى تجد مكانًا يتوفر فيه الاستقبال الجيد، ثم قم بتثبيته بحائط أو سطح صلب آخر.
3. وإذا كان الاستقبال ضعيفًا، فقد تحتاج إلى تثبيت هوائي خارجي. للقيام بذلك، قم بتوصيل هوائي FM خارجي بالوحدة الطرفية لموصل هوائي FM للمنتج باستخدام كابل متحد المحور بمقاومة 75 أومًا (غير مرفق).

2. للصيانة فقط

- يستخدم هذا المقبس للاختبار فقط، فيرجى عدم استخدامه.

3. الوحدتان الطرفيتان AUX IN 2

1. استخدم كابل الصوت (غير مرفق) لتوصيل الوحدة الطرفية AUX IN 2 في المنتج بمقبس Audio Out (مخرج الصوت) بجهاز الإخراج التناظري الخارجي.
- تأكد من مطابقة ألوان الموصلات.
- إذا كان جهاز الإخراج التناظري الخارجي لا يحتوي إلا على مقبس إخراج صوت واحد، فقم بتوصيل إما اليمين أو الشمال.
- اضغط على الزر **TUNER/AUX (موالف/اضافي)** لتحديد AUX 2.
- إذا لم يعمل أي زر لمدة 8 ساعات في وضع AUX، فسيتم إيقاف التشغيل تلقائيًا.

4. الوحدات الطرفية للمبة Speaker Beat Waving (تقلب إيقاعات السماعة)، التي لا تميز بين القناة اليسرى واليمنى.

5. الوحدة الطرفية لسماعة القناة 2.2

توجد الوحدات الطرفية لموصل السماعات خلف المنتج.

1. للوصول إلى جودة الصوت الملائمة، أدخل موصلات السماعات هذه إلى اللون نفسه لنظام الوحدات الطرفية للسماعات.
- القناة اليسرى (التي تحمل الحرف L، أو اللون الأبيض/الأرجواني).
- القناة اليمنى (التي تحمل الحرف R، أو الأحمر/الأرجواني).
- لا تقم بتوصيل موصل SUBWOOFER (مضخم الصوت) الأرجواني بالوحدة الطرفية البيضاء أو الحمراء بالقوة.

6. الطاقة

- الرجاء استخدام كابل الطاقة المتوفر كملحق فقط.

7. مروحة التبريد

- تعمل المروحة عندما تكون الوحدة في وضع التشغيل. فإذا تم ضبط مستوى الصوت على الحد الأدنى، فلن تعمل المروحة. اترك مسافة فارغة نحو 10 سم كحد أدنى من جميع جوانب المروحة عند تركيب المنتج.

وحدة التحكم عن بعد

1. الطاقة
2. TUNER/AUX (موالف/إضافي)
3. USB
4. أزرار الأرقام (0 إلى 9)

أثناء التشغيل، اضغط على رقم المسار المطلوب. يتم تشغيل المسار المحدد.

5. تخطي(10- و10+)
6. التخطي
7. إيقاف
8. تشغيل
9. REPEAT (تكرار)
10. GIGA (جيجا)
11. إدخال
12. VOLUME(-,+) (رفع/خفض مستوى الصوت)
13. TUNING MODE (وضع التوليف)
14. TIMER ON/OFF (تشغيل / إيقاف الموقت)
15. TIMER SET (ضبط الموقت)
16. SLEEP (السكون)

لتعيين وقت السكون لإيقاف تشغيل المنتج.

17. MY KARAOKE (كاريوكي)
18. MIC VOLUME -, + (رفع/خفض مستوى صوت الميكروفون)
19. USB REC (تسجيل USB)
20. DELETE (حذف)
21. صوت أحادي/استريو لنطاق FM، سرعة تسجيل القرص المضغوط للنسخ من القرص المضغوط
22. TUNING/ALBUM (توليف/ألبوم) ∧,∨
23. EQ (موازن الصوت)
24. AUTO CHANGE (تغيير تلقائي)
25. REPEAT A-B (تكرار A-B)
26. PAUSE (إيقاف موقت)
27. بحث
28. CD/ Bluetooth (القرص المضغوط /بلوتوث)
29. BEAT WAVING (تقلب الإيقاعات)
30. كتم الصوت

لتشغيل/إيقاف الصوت مؤقتًا.

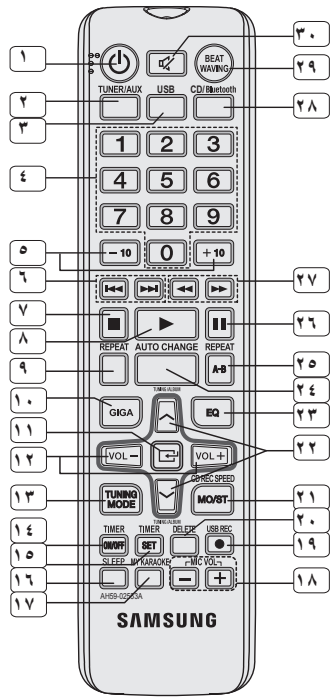

تركيب البطاريات في وحدة التحكم عن بعد

- ضع البطاريات في وحدة التحكم عن بعد بحيث تكون متطابقة مع القطبين : (+) مع (+) و(–) مع (–).
- يحظر التخلص من البطاريات عن طريق حرقها.
- ينبغي عدم تكسير. دائرة البطاريات أو تفكيكها أو تعريضها للسخونة الزائدة.
- هناك احتمال بحدوث انفجار إذا تم استبدال البطارية بطريقة غير صحيحة. قم باستبدالها ببطاريات من نفس النوع أو من نوع مماثل.
- يمكن استخدام وحدة التحكم عن بعد من مسافة تصل إلى 23 قدمًا (7 أمتار) تقريبًا من المنتج في خط مستقيم.

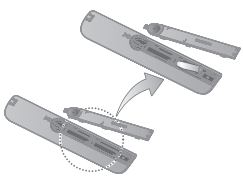

* حجم البطارية: AAA

توصيل السماعات

هذا هو اكتمال السماعة.

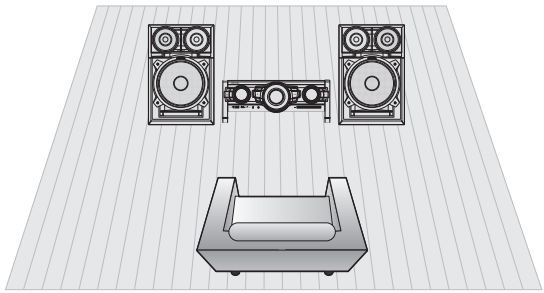

- قد لا يعمل المنتج بشكل سليم إذا لم يتم تثبيته وفقًا لإعداد السماعة الموصى به، أو تعرض لاهتزاز أو صدمات خارجية.
- لا تقم بتمديد أسلاك السماعات، ولا تقم بالضغط عليها أو نزع الغطاء الخارجي لها باستخدام شيء ثقيل

توصيل أرجل تثبيت السماعات

وصل أرجل تثبيت السماعات المرفقة بالركن الخلفي من السماعة لتثبيت حامل السماعة لتجنب انزلاقها.

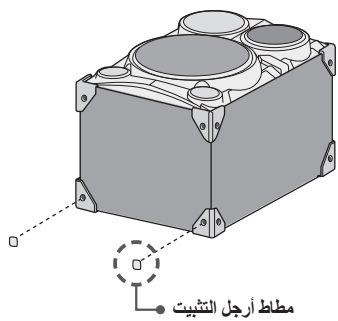

وظيفة العرض

يمكنك عرض جميع الوظائف المتاحة على الشاشة، وضبط درجة سطوع الشاشة وتحديد إما تشغيل الشاشة/LED أو إيقاف تشغيلها.

وفي كل مرة تضغط فيها على الزر **DISPLAY/DEMO** (العرض/العرض التوضيحي) سيتغير وضع العرض كالتالي:

- **وظيفة DIMMER (خافض شدة الإضاءة)**
  يتم تحديد وظيفة Dimmer (خافض شدة الإضاءة) وخفض إضاءتها.
- **LED OFF (إيقاف اللمبة)**
  يتم إيقاف تشغيل اللمبة أثناء تشغيل وظيفة خافض شدة الإضاءة.
- **Clock ON (تشغيل الساعة)**
  يتم عرض الساعة التي حددتها.
- **Display/LED ON (تشغيل الشاشة/اللمبة)**
  تشغيل كل الشاشات واللمبات.

وظيفة DEMO Music (موسيقى العرض التوضيحي)
اضغط على زر DISPLAY/DEMO (العرض/العرض التوضيحي) لمدة 5 ثوانٍ لتشغيل موسيقى العرض التوضيحي.
عند الضغط على زر DISPLAY/DEMO (العرض/العرض التوضيحي)، ستعمل الوظيفة كالتالي:
DIMMER (خافض شدة الإضاءة) ← LED Off إيقاف تشغيل اللمبة (الوحدة/الساعة) ← **--:--** [عرض الوقت] ← LED On (تشغيل اللمبة) (الوحدة/الساعة)

- إلغاء وضع Demo Music (موسيقى العرض التوضيحي)
- اضغط على الزر DISPLAY/DEMO (العرض/العرض التوضيحي) لمدة 5 ثوانٍ. فعندئذٍ سيتم إلغاء الوضع الحالي وإيقاف تشغيل المنتج.
- اضغط على الزر TUNER/AUX (موالف/إضافي) أو /CD Bluetooth (القرص المضغوط/بلوتوث) أو USB. سيتم إلغاء الوضع الحالي وتغيير الوضع إلى الوضع الذي حددته.

- عند تشغيل Music DEMO (موسيقى العرض التوضيحي)، فلن تعمل جميع الأزرار وذلك باستثناء أزرار ⏻ [الطاقة] وVOL (مستوى الصوت)، و 🔇 [كتم الصوت] والأزرار المذكورة عاليه.
- إذا قمت بتوصيل مكبر الصوت بالمنفذ AUX1 أثناء عرض DEMO، فسيصدُر الصوت من خلال AUX1، ويمكنك استخدام زري VOL و 🔇 [كتم الصوت].

تشغيل القرص المضغوط

تحميل القرص المضغوط

يمكنك تشغيل القرص المضغوط مقاس 12 سم الذي لا يتطلب محولاً.

1. أدخل القرص المضغوط برفق في فتحة القرص بحيث يكون ملصق القرص مواجهًا لأعلى وسيتم تشغيل القرص تلقائيًا بعد ذلك.
   - يمكنك إما تحميل أو إلغاء تحميل أقراص المكون عندما يتم تحديد الراديو أو USB أو وظيفة المصدر الإضافي، وعندما تقوم بالضغط على الزر EJECT (إخراج)، تتغير جميع الوظائف الأخرى إلى وضع القرص المضغوط.
   - إذا لم يتم الضغط على أي زر في المنتج أو في وحدة التحكم عن بعد لمدة تزيد عن 3 دقائق عندما يكون المنتج في وضع Pause (إيقاف مؤقت)، فسيتحول إلى وضع Stop (إيقاف).
   - إذا لم يتم الضغط على أي زر في المنتج أو في وحدة التحكم عن بعد لمدة تزيد عن 25 دقيقة عندما يكون المنتج في وضع Stop (إيقاف)، سيتم إيقاف تشغيل الطاقة تلقائيًا.

تشغيل CD/MP3/WMA-CD

هذا الجهاز مصمم لتشغيل الأقراص الصوتية المضغوطة وCD-R و CD-RW وMP3/WMA-CD.

1. أدخل القرص برفق في فتحة القرص بحيث يكون ملصق القرص مواجهًا لأعلى.
2. وسيتم تشغيل القرص تلقائيًا.
   - بالنسبة إلى صوت MP3/WMA-CD، قد يستغرق الأمر عدة دقائق لاستكمال عملية المسح الضوئي لمسارات الأقراص.
   - إذا قمت بتشغيل ملف يحمل اسمًا باللغة الإنجليزية أو وسيطة /MP3 WMA-CD تحمل اسم باللغة الإنجليزية، فسيتم عرض اسم الأغنية في الشاشة. (قد لا تتم الإشارة إلى لغات أخرى بجانب اللغة الإنجليزية.)
   - لن يقوم المسار الذي يحمل اسم باللغة الإنجليزية والذي يحتوي على أحد الحروف الخاصة بعرض الاسم على الشاشة.

<شاشة عرض القرص>



3. قم بضبط مستوى الصوت وفقًا للاحتياجات من خلال الإجراءات التالية.
   - أدر مفتاح التحكم في **VOLUME** (مستوى الصوت) بالمنتج.
   - اضغط على الزر **VOL +** (رفع مستوى الصوت) أو **VOL -** (خفض مستوى الصوت) بوحدة التحكم عن بعد.
     يمكن ضبط مستوى الصوت في 31 خطوة (VOLUME MIN (أقل مستوى صوت)، VOLUME 29 ~VOLUME01 (مستوى الصوت 1 إلى مستوى الصوت 29) وVOLUME MAX (أقصى مستوى صوت).
4. الوحدة الأساسية
   لإيقاف التشغيل مؤقتًا، اضغط على الزر ▶II.
   اضغط مرة أخرى على الزر ▶II لمواصلة تشغيل القرص.
   وحدة التحكم عن بعد
   لإيقاف التشغيل مؤقتًا، اضغط على الزر **PAUSE (إيقاف مؤقت)(II)**.
   اضغط على الزر **PLAY (تشغيل)(▶)** لمواصلة تشغيل القرص.
5. لإنهاء التشغيل، اضغط على الزر **STOP (إيقاف) (■)**.

- في حالة عدم وجود قرص مضغوط تم إدخاله تتم الإشارة إلى ذلك بعبارة "NO DISC" (لا توجد أقراص).
- قد تختلف جودة تشغيل MP3/WMA-CD بناءً على حالة القرص الذي يحتوي على ملفات الموسيقى أو حالة المسجل الذي تم إنشاء القرص من خلاله.
- في حالة وجود أنواع ملفات أخرى أو مجلدات غير ضرورية على القرص نفسه، فستواجه مشكلات مع التشغيل.

أدخل القرص المضغوط برفق في فتحة القرص ولا تستعمل القوة المفرطة.

- لا تتعامل بقوة مع المنتج أو تضع شيئًا ثقيلاً فوقه.
- لا تقوم بإدخال قرص مضغوط شكله خارج المواصفات كقرص مضغوط على شكل قلب أو ثماني الزوايا. وإلا، فقد يتلف المنتج.
- يجب توخي الحذر بشأن صيانة القرص المدمج.

الوظائف الأساسية

تحديد مسار

يمكنك تحديد المسار المطلوب أثناء تشغيل القرص.

لتشغيل المسار السابق

اضغط على الزر ▶▶| في غضون 3 ثوان بعد بدء تشغيل المسار الحالي.
اضغط على الزر ▶▶| مرتين لمدة 3 ثوان على الأقل بعد بدء تشغيل المسار الحالي.

لتشغيل المسار التالي

اضغط على الزر |◀◀.

لتشغيل المسار الحالي

اضغط على الزر ▶▶| لمدة 3 ثوان في وقت لاحق بعد بدء تشغيل المسار الحالي.

لتشغيل مسار من اختيارك

اضغط على الزر ▶▶| أو |◀◀ للانتقال إلى المسار المطلوب.

- كما يمكنك أيضًا استخدام أزرار الأرقام (من 0 إلى 9) بوحدة التحكم عن بعد لتحديد مسار.

البحث عن مسار/مجلد بسرعة

يمكنك تحديد مسار/مجلد مباشرةً بدون استخدام الزر ▶▶| أو |◀◀.

CDDA/MP3-CD/WMA-CD

1. شغل ذراع **EASY SEARCHING JOG** (مقبض البحث السهل) على المنتج إلى اليسار أو اليمين لتحديد المسار المرغوب.
   - يمكنك الانتقال إلى المسار المحدد مباشرةً.
2. عندما يتم إجراء البحث، يبدأ تشغيل التتبع تلقائيًا.

البحث عن عبارة موسيقية معينة على القرص المضغوط

عند الاستماع إلى قرص مدمج، فيمكنك البحث عن عبارة موسيقية معينة على مسار بسرعة.

البحث للأمام..... ◀◀
البحث للخلف..... ▶▶

يمكنك أيضًا الضغط مع الاستمرار على الزر ▶▶| أو |◀◀ في المنتج لإجراء مسح ضوئي للمسار تلقائيًا.

تكرار مسار واحد أو جميع المسارات على القرص المضغوط

يمكنك تكرار تشغيل القرص المضغوط بشكل غير محدود كالتالي:

- يحتوي القرص المضغوط على مسار معين.
- جميع مسارات القرص المضغوط.

1. اضغط على الزر **REPEAT (تكرار)** بوحدة التحكم عن بعد. وفي كل مرة تضغط فيها على الزر **REPEAT (تكرار)** سيتغير وضع التكرار كالتالي:

   MP3: OFF (إيقاف تشغيل) ← TRACK (المسار) ← DIR (الدليل) ← ALL (الكل) ← RANDOM (عشوائي)

   القرص المضغوط: OFF (إيقاف تشغيل) ← TRACK (المسار) ← ALL (الكل) ← RANDOM (عشوائي)

2. إذا أردت إيقاف وظيفة التكرار، فاضغط على الزر **REPEAT (تكرار)** حتى يتم عرض **"OFF"** (إيقاف).

- **OFF (إيقاف)**: لإلغاء تشغيل التكرار.
- **TRACK (المسار)**: لتشغيل المسار المحدد بشكل متكرر.
- **DIR (الدليل)**: لتشغيل جميع المسارات في المجلد المحدد بشكل متكرر.
- **ALL (الكل)**: لتشغيل القرص بالكامل بشكل متكرر.
- **RANDOM (عشوائي)**: لتشغيل المسارات بترتيب عشوائي.

تشغيل تكرار A-B

يمكنك تشغيل مقطع معين من القرص المضغوط بشكل متكرر.

1. اضغط على الزر **REPEAT A-B (تكرار A-B)** في بداية الجزء المطلوب.
   - سيتم عرض **"RPT A"** (تكرار A).
2. اضغط على الزر **REPEAT A-B (تكرار A-B)** في نهاية الجزء المطلوب.
   - سيتم عرض **"RPT AB"** (تكرار AB).
3. لإلغاء وظيفة **REPEAT A-B (تكرار A-B)**، اضغط مرة أخرى على الزر **REPEAT A-B (تكرار A-B)**.
   - سيتم عرض **"OFF"** (إيقاف تشغيل).

تتوفر وظيفة REPEAT A-B (تكرار A-B) داخل المسار.

برمجة القرص المضغوط

لا تتوفر هذه الوظيفة أثناء تشغيل قرص MP3/WMA-CD

- يمكنك برمجة ترتيب تشغيل ما يصل إلى 24 مسارًا من اختيارك.
- ولكن، يجب إيقاف تشغيل القرص قبل تحديد المسارات.

1. في وضع تشغي ل القرص، اضغط على الزر **STOP (إيقاف)** (■) لإيقاف تشغيل القرص المضغوط.
2. اضغط على الزر **ENTER (إدخال)** ( ) لعرض الرسالة التالية:

   PROG 01 TRACK---

   (01= رقم البرنامج، ---= رقم المسار)

3. استخدم الزر ▶▶| أو |◀◀ للانتقال إلى المسار المطلوب.
   - اضغط على الزر ▶▶| للانتقال إلى المسار السابق.
   - اضغط على الزر ▶▶| للانتقال إلى المسار التالي.
4. اضغط على الزر **ENTER (إدخال)** (⏎) لتأكيد اختيارك، وسيتم تخزين الاختيار وعرض PROG 02 TRACK---.
5. لتحديد مسار آخر، اتبع الخطوتين من 3 إلى 4 المذكورتين آنفًا.
6. اضغط على الزر **PLAY (تشغيل)** (►) لتشغيل المسارات المبرمجة.
7. اضغط على الزر **STOP (إيقاف)** (■) لإيقاف تشغيل المسارات المبرمجة، واضغط مرة أخرى على الزر **STOP (إيقاف)** (■) لإلغاء تشغيل المسارات المبرمجة.
   - إذا قمت بإخراج القرص أو إيقاف تشغيل المنتج أو حولته إلى وضع آخر، فسيتم إلغاء عملية البرمجة.

فحص أو تعديل المسار الذي تمت برمجته

يمكنك فحص قائمة المسارات المبرمجة وتعديلها كما تريد.

1. إذا كان المسار المبرمج قيد التشغيل، فاضغط على الزر **STOP (إيقاف)** (■) مرة واحدة.
2. اضغط على الزر **ENTER (إدخال)** (⏎) مرتين لعرض الرسالة أدناه:
   SAVED 01 TRACK 002
   (01= رقم البرنامج، 002= رقم المسار)
3. كرر الضغط على الزر **ENTER (إدخال)** (⏎) حتى يتم عرض المسار المطلوب.
4. استخدم الزر ▶▶| أو |◀◀ لتحديد مسار آخر.
5. اضغط على الزر **ENTER (إدخال)** (⏎) لتأكيد اختيارك.
6. لتشغيل المسارات المبرمجة، اضغط على الزر **Play (تشغيل)** (►).

تشغيل جهاز USB

قم بتوصيل جهاز تخزين خارجي مثل وحدة ذاكرة USB المحمولة أو محرك الأقراص الثابتة (HDD) الخارجي بالمنتج. يمكنك تشغيل الملفات بتنسيق MP3/WMA.

قبل أن تبدأ!

1. قم بتوصيل جهاز تخزين USB الخارجي بالمنتج.
2. حدد وضع USB بالضغط على الزر **USB 1** أو **USB 2** بالمنتج أو بالضغط على الزر **USB** بوحدة التحكم عن بعد.
3. سيعمل الملف الأول من الدليل الأول تلقائيًا.
4. لإيقاف التشغيل
   اضغط على الزر **STOP (إيقاف)** (■) لإيقاف التشغيل.

لإزالة جهاز USB

إذا قمت بالضغط على الزر **STOP (إيقاف)** (■)مرة أخرى، فسيمكنك إزالة جهاز USB بأمان.

لا تقم بتوصيل شاحن USB بمنفذ USB في هذا المنتج. وإلا، فقد يتلف المنتج.

لتحديد ملف من جهاز USB

يمكنك تحديد ملف MP3 أثناء التشغيل.

إذا كنت تريد إزالة (الملف) التالي/السابق، فاضغط على الزرين ▶▶|،|◀◀ لفترة قصيرة.

- سيؤدي ذلك إلى نقل الملف التالي/السابق داخل الدليل.
- إذا قمت بالضغط على الزرين ▶▶|أو|◀◀ مرات تفوق عدد الملفات الموجودة في الدليل، فسيؤدي ذلك إلى نقل الزيادة إلى الدليل التالي.

<u>للتكرار</u>

1. اضغط على الزر **REPEAT (تكرار)**.
   وفي كل مرة تضغط فيها على الزر **REPEAT (تكرار)**، سيتغير وضع التكرار كالتالي:
   OFF (إيقاف) ← **TRACK (المسار)** ← **DIR (الدليل)** ← **ALL (الكل)** ← **RANDOM (عشوائي)**
2. إذا أردت إيقاف وظيفة التكرار، فاضغط على الزر **REPEAT (تكرار)** حتى يتم عرض **"OFF"** (إيقاف).

- **OFF (إيقاف)**: لإلغاء تشغيل التكرار.
- **TRACK (المسار)**: لتشغيل الملف المحدد بشكل متكرر.
- **DIR**(الدليل): لتشغيل جميع الملفات في المجلد المحدد بشكل متكرر.
- **ALL (الكل)**: لتشغيل جميع الملفات بشكل متكرر.
- **RANDOM (عشوائي)**: لتشغيل الملفات بترتيب عشوائي.

لاستخدام البحث عالي السرعة

يمكنك البحث عن القسم المطلوب بسرعة أثناء التشغيل.

1. اضغط على الزر ◀◀،▶▶.
   - وفي كل مرة تقوم فيها بالضغط على الزر، فسوف تنتقل بسرعة للأمام/للخلف.

لن يتم إخراج الصوت في البحث عالي السرعة.

لحذف ملف

يمكنك حذف ملف من جهاز USB.

1. حدد الملف الذي تريد حذفه.
2. اضغط على الزر **DELETE (حذف)**.
3. اضغط على الزرين ▶▶|،|◀◀ بالمنتج ووحدة التحكم عن بعد لتحديد **YES/NO (نعم/لا)**.
   - لإلغاء الاختيار،اضغط على الزر **RETURN (رجوع)** بالمنتج.

4. اضغط على الزر **ENTER (إدخال)** بوحدة التحكم عن بعد. سيتم حذف الملف المحدد.

نظام الملفات NTFS غير مدعوم.

لتخطي 10 ملفات قادمة

1. اضغط على الزر **10+** أو **10-** في وضع التشغيل. سيترتب على ذلك تخطي الملفات بمعدل يصل إلى 10 أو 10- من الملف الحالي.

نقل المجلد

اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧، ∨ لوحدة التحكم عن بعد للانتقال إلى المجلد السابق/التالي.

كيفية إزالة جهاز USB بأمان

1. اضغط على الزر (■) مرتين أثناء تشغيل USB واضغط على الزر (■) مرة واحدة عندما يكون في حالة توقف.
2. في حالة ظهور **REMOVE (إزالة)** على الشاشة، قم بإزالة جهاز USB.

قبل استخدام وحدة تخزين USB

- ربما لا تعمل بعض أجهزة USB بشكل صحيح مع هذا المنتج.
- يدعم هذا المنتج محرك الأقراص الصلبة (HDD) الخارجي الذي تم تنسيقه بنظام الملفات FAT فقط.
- ينبغي أن يتم توصيل محرك الأقراص الثابتة USB 2.0 بمصدر طاقة منفصل. وإلا، فلن يعمل محرك الأقراص الثابتة USB 2.0 على الإطلاق.
- إذا تم توصيل جهاز تخزين USB خارجي بعدة أجهزة، فسيتم تشغيل ملفات MP3 في محرك الأقراص الثابتة الأول فقط.
- لا يتم دعم الملفات المطبقة لـ DRM. إدارة الحقوق الرقمية: سيؤدي ذلك إلى تقييد الوصول غير المصرح به لملف DRM وذلك حتى تتم حماية حقوق نشر الملف من القرصنة.
- حتى لو كان امتداد الملف هو .mp3، فلا يمكن تشغيله إذا تمت تهيئته في طبقة 1 MPEG أو 2.
- لا تستخدم موزع USB غير معروف.
- يتم عرض 15 حرفًا الأولى فقط من ملف بتنسيق MP3/WMA.
- محركات الأقراص الثابتة القابلة للإزالة بسعة أقل من 160 جيجابايت فقط. وعلى حسب الجهاز، قد لا يتم دعم محرك الأقراص الثابتة القابل للإزالة بسعة 160 جيجابايت أو أكثر.
- سيستغرق الأمر عدة دقائق للتعرف على الملفات في جهاز USB المحدد.
- قد يتسبب جهاز USB (محرك الأقراص الثابتة USB، على وجه الخصوص) في تأخير الانتقال إلى الملف التالي.
- إن سعة تخزين USB التي تدعم الإصدار USB VER1.1 فقط قد تبطئ الوصول أو قد لا تتعرف على خصائص الملف.
- أقصى تيار مدعوم من قبل جهاز USB الخارجي عبر كل منفذ USB هو 0.5 أمبير (وفقًا للتيار المباشر 5 فولتات).
- ربما تكون أجهزة معينة من USB أو أجهزة الكاميرا الرقمية، أو قارئ بطاقة USB، أو الآي بود (iPod)، أو الآي فون (iPhone) أو الهاتف الذكي، غير مدعومة .

بلوتوث

يمكنك استخدام جهاز البلوتوث للاستمتاع بالموسيقى بصوت استريو فائق الجودة، كل هذا لاسلكيًا!

ما هي تقنية بلوتوث؟

بلوتوث هو تقنية تتيح إمكانية ربط الأجهزة المتوافقة مع البلوتوث بسهولة مع بعضها البعض من خلال اتصال لاسلكي قصير المدى.

- ربما يتسبب جهاز البلوتوث في إحداث تشويش أو عطل، وفقًا للاستخدام، في حالة:
  - جزء من جسدك ملامس لنظام الاستقبال/الإرسال الخاص بجهاز البلوتوث أو نظام Hi-Fi Component.
  - يخضع بلوتوث للتقلبات الكهربية من العوائق الناتجة عن وجود حائط، أو زاوية، أو فواصل مكتبية.
  - يتعرض لتداخل كهربي من أجهزة تستخدم نفس نطاق التردد بما في ذلك الأجهزة الطبية، وأفران الميكروويف، والشبكات المحلية اللاسلكية.
- قم بإقران نظام Hi-Fi Component مع جهاز البلوتوث عندما يكونان قريبين من بعضهما.
- كلما زادت المسافة بين نظام Hi-Fi Component وجهاز البلوتوث، انخفضت الجودة. إذا تجاوزت المسافة نطاق بلوتوث التشغيلي، فسينقطع الاتصال.
- في المناطق التي بها حساسية استقبال ضعيفة، قد لا يعمل اتصال بلوتوث بشكل صحيح.
- يعمل اتصال البلوتوث فقط عندما يكون قريبًا من الجهاز. وسيتم قطع الاتصال تلقائيًا إذا كانت المسافة خارج هذا النطاق. وحتى في حدود هذا النطاق، قد تتدهور جودة الصوت بالعوائق مثل الحوائط والأبواب.
- ربما يتسبب الجهاز اللاسلكي في حدوث تداخل كهربي أثناء تشغيله.

لتوصيل نظام Hi-Fi-Component بجهاز بلوتوث.

تأكد مما إذا كان جهاز بلوتوث يدعم وظيفة سماعة رأس استريو متوافقة مع بلوتوث.

1. اضغط على زر **CD/Bluetooth** (القرص المضغوط/بلوتوث) على نظام Hi-Fi Component لعرض رسالة **BLUETOOTH** (بلوتوث)
   - سترى رسالة WAIT (انتظر) لفترة وبعد ذلك رسالة READY (جاهز) على الشاشة الأمامية لجهاز Hi-Fi Component.
2. حدد قائمة بلوتوث بجهاز بلوتوث الذي تريد توصيله. (راجع دليل المستخدم الخاص بجهاز البلوتوث.)
3. حدد قائمة سماعة الرأس الاستريو بجهاز بلوتوث.
   - ستظهر لك قائمة بالأجهزة التي تم فحصها.
4. حدد **"[Samsung] HI-FI XXXXXX"** من القائمة.
   - عند توصيل المكون بجهاز البلوتوث، ستظهر لك **BLUETOOTH ← CONNECTED** (بلوتوث) على الشاشة الأمامية.

- في حالة فشل جهاز البلوتوث في الاقتران بنظام Component (المكون)، قم بحذف "[Samsung] HI-FI XXXXXX" التي تم العثور عليها من قبل جهاز البلوتوث وابحث عن نظام Component (المكون) مرة أخرى.

5. قم بتشغيل الموسيقى على الجهاز المتصل.
- يمكنك الاستماع إلى الموسيقى الجاري تشغيلها على جهاز بلوتوث المتصل عبر نظام Hi-Fi Component.
- في وضع **BLUETOOTH**، قد لا تتوفر بعض وظائف التشغيل/التكرار/الإيقاف/التالي/رجوع في بعض الطرز.

➢ يدعم نظام Hi-Fi Component بيانات SBC متوسط الجودة فقط (حتى 237 كيلو بت في الثانية بسرعة 48 كيلو هرتز)، ولا يدعم بيانات SBC عالية الجودة (328 كيلو بت في الثانية بسرعة 44.1 كيلو هرتز).
- ميزة AVRCP غير مدعومة.
- قم بالتوصيل فقط بجهاز بلوتوث يدعم وظيفة A2DP (الصوت والصورة).
- لا يمكنك التوصيل بجهاز بلوتوث يدعم فقط وظيفة HF (السماعة اللاسلكية).
- يمكن إقران جهاز بلوتوث واحد في المرة الواحدة.
- عند إيقاف تشغيل نظام Hi-Fi Component وفصل الاقتران، لن يتم استعادة الاقتران تلقائيًا. لإعادة التوصيل، يتعين عليك إقران الجهاز مرة أخرى.
- ربما لا يمكنك البحث أو التوصيل بالشكل المناسب من خلال نظام Hi-Fi Component في الحالات التالية.
  - في حالة وجود مجال كهربي قوي حول نظام Hi-Fi Component .
  - في حالة اقتران أجهزة بلوتوث متعددة بنظام Hi-Fi Component في نفس الوقت.
  - في حالة إيقاف تشغيل جهاز بلوتوث، أو وضعه في غير مكانه، أو حدوث خلل.
  - لاحظ أن أجهزة مثل أفران الميكروويف، محولات وصلات LAN اللاسلكية، مصابيح الفلوريسنت، وأفران الغاز تستخدم نفس نطاق التردد الذي يستخدمه جهاز البلوتوث، مما قد يتسبب في حدوث تداخل كهربي.

لفصل جهاز البلوتوث من نظام Hi-Fi-Component

يمكنك فصل جهاز البلوتوث من نظام Hi-Fi Component.
للاطلاع على التعليمات، راجع دليل المستخدم الخاص بجهاز البلوتوث.
- سيتم فصل Hi-Fi Component.
- عند فصل Hi-Fi Component من جهاز البلوتوث، سيعرض نظام Hi-Fi Component رسالة **DISCONNECTED** ← **READY** مفصول على الشاشة الأمامية.

لفصل نظام Hi-Fi-Component من جهاز البلوتوث

اضغط على زر **CD/BLUETOOTH** (القرص المضغوط/بلوتوث) الموجود على اللوحة الأمامية لنظام Hi-Fi Component للتحويل من وضع البلوتوث إلى وضع آخر أو إيقاف تشغيل نظام Hi-Fi Component.

- سينتظر جهاز البلوتوث المتصل فترة معينة من الوقت لاستجابة من نظام Hi-Fi Component قبل إلغاء الاتصال. (قد يختلف وقت قطع الاتصال، حسب جهاز البلوتوث)
- سيتم قطع اتصال الجهاز المتصل حاليًا.

➢ في وضع توصيل البلوتوث، سينقطع الاتصال بالبلوتوث في حال تخطت المسافة بين نظام Hi-Fi Component وجهاز البلوتوث (5 أمتار).
- وفي حالة دخول جهاز البلوتوث مرة أخرى في نطاق التشغيل وإعادة الاتصال مرة أخرى بعد قطعه، يمكنك إعادة التشغيل لاستعادة الاقتران مع جهاز البلوتوث.
- يتم إيقاف تشغيل نظام Hi-Fi Component تلقائيًا بعد 25 دقيقة في حالة جاهز.

استخدام وظيفة My Karaoke (كاريوكي)

يمكنك استخدام وظيفة My Karaoke (كاريوكي) للغناء بمفردك مع الأقراص المضغوطة وUSB المفضلة.

1. وصل الميكروفون بمقبس MIC (الميكروفون) في الجانب الأمامي للمنتج.
- إذا كان مقبس الميكروفون أكبر من مقبس MIC (الميكروفون) الذي يبلغ 3.5 (ø)، فإنك بحاجة إلى محول-موصل (اختياري) لإكمال الاتصال.
- قم أولاً بتوصيل الموصل-المحول بمقبس MIC (الميكروفون) في الجنب الأمامي للمنتج،
- ثانيًا، قم بتوصيل الميكروفون (ذو المقبس الأكبر) بالموصل-المحول.

2. اضغط على زر **MIC VOL-, + (رفع/خفض مستوى صوت الميكروفون)** الموجود في وحدة التحكم عن بُعد لضبط مستوى صوت الميكروفون.

3. اضغط على زر **MY KARAOKE (كاريوكي)** بوحدة التحكم عن بعد لكتم الصوت عند الرغبة في ذلك. في كل مرة يتم فيها الضغط على الزر، يتم تغيير التحديد كما يلي:
MY KARAOKE ON (تشغيل كاريوكي) ← MY KARAOKE OFF (إيقاف كاريوكي)
- إذا سمعت ضوضاء غريبة (أنين، عواء) أثناء استخدام ميزة الكاريوكي، فحرك الميكروفون بعيدًا عن السماعات. لا تضع الميكروفون بحيث يكون مواجه للسماعة.
- لا يعمل الميكروفون في الوضعين AUX (إضافي) وTUNER (موالف).
- عند التوصيل بالميكروفون، سيتوقف تشغيل GIGA SOUND (صوت جيجا) تلقائيًا. حتى عند إزالة الميكروفون، لن يتم تشغيله.

- عند تشغيل كاريوكي، لا يعمل وضع EQ/GIGA SOUND (موازن الصوت/صوت جيجا) ووضع FOOTBALL (كرة القدم).
- بعد عملية الإيقاف، سيختفي إعداد الكاريوكي.
- تتوفر وظيفة كاريوكي، عند التوصيل بالميكروفون فقط.

وظيفة تخطي 10

اضغط على زر 10+ أو 10- بوحدة التحكم عن بعد في وضع التشغيل. سيعمل ذلك على تخطي 10 أو 10- مسارات من المسار الحالي.

وظيفة التغيير التلقائي

يمكنك تشغيل القرص وUSB بالتناوب.

1. اضغط على زر **AUTO CHANGE (التغيير التلقائي)** الموجود في وحدة التحكم عن بُعد.
في كل مرة تقوم فيها بالضغط على هذا الزر، سيتم تبديل الوضع كما يلي:

AUTO CHANGE ON (تشغيل التغيير التلقائي) ← AUTO CHANGE OFF (إيقاف التغيير التلقائي)

- عندما يكون وضع **AUTO CHANGE (تغيير تلقائي)** هو **"ON"** (تشغيل)،
  - سيتم تشغيل الموسيقى على **DISC (القرص)** ← **USB1** ← **USB2** باستمرار.
  - عند الضغط على زر **POWER** (تشغيل) أو زر تغيير الوظيفة أو زر **EJECT** (إخراج)، تتحول وظيفة **AUTO CHANGE** (تغيير تلقائي) تلقائيًا إلى وضع **"OFF"** (إيقاف).
  - لا يمكن أن يعمل التسجيل.
  - لا يمكن أن تعمل وظيفة **REPEAT** (تكرار)، **SLEEP** (السكون) وتتغير تلقائيًا إلى **OFF** (إيقاف).
  - ولن تعمل وظيفة **CD REC SPEED** (سرعة تسجيل القرص المضغوط)، **USB REC** (تسجيل USB)، **NUMBER KEY** (مفاتيح الأرقام) و**DELETE** (حذف).
- في حالة تشغيل USB، عند فصله، تتحول وظيفة **AUTO CHANGE (تغيير تلقائي)** تلقائيًا إلى الوضع **"OFF"** (إيقاف).
- في حالة عدم وجود USB1، فإنه سينتقل إلى USB2.

الاستماع إلى الراديو

لتخزين المحطات التي تريدها

يمكنك تخزين ما يصل إلى:
15 محطة من محطات FM.

1. حدد **FM** بالضغط على الزر **TUNER/AUX (موالف/إضافي)**.
2. للبحث عن محطة من خلال وضع الضبط المسبق أو الوضع اليدوي، اضغط على الزر **TUNNING MODE (وضع التوليف)** بوحدة التحكم عن بعد أو اضغط على الزر **STOP (إيقاف)** بالمنتج.
   - **الضبط المسبق** : اضغط مرة أو أكثر حتى يتم عرض PRESET (الضبط المسبق). يمكنك البحث عن الترددات المخزنة في وضع الضبط المسبق.
   - **Manual (يدوي)** : اضغط مرة واحدة أو أكثر حتى يتم عرض MANUAL (يدوي). يمكنك البحث عن الترددات واحدًا تلو الآخر في وضع Manual (يدوي).
3. حدد المحطة المراد تخزينها من خلال:
   - الضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ بوحدة التحكم عن بعد لإختيار المحطة مسبقة الضبط.
4. اضغط على الزر **MO/ST (أحادي/استريو)** للتبديل بين الاستريو والأحادي.
   - في المنطقة رديئة الاستقبال، حدد **MONO (أحادي)** للحصول على بث واضح خالٍ من التداخل.
   - وينطبق ذلك فقط عند الاستماع إلى محطة FM.
5. إذا كنت لا تريد تخزين محطة الراديو التي تم العثور عليها، فعد إلى الخطوة **3** وابحث عن محطة أخرى.
وفي حالة عدم القيام بذلك:
   أ. اضغط على زر **ENTER (إدخال)**.
   ب. أو اضغط على الزر **TUNING/ALBUM (توليف/ألبوم)** بوحدة التحكم عن بعد لتحديد رقم البرنامج.
   ج. اضغط على الزر **ENTER (إدخال)** لحفظ الضبط المسبق.
6. لتخزين أي ترددات لاسلكية مطلوبة أخرى، كرر الخطوات من **3** إلى **4**.

في وضع Tuner (الموالف)
- في الوضع اليدوي، يمكنك استخدام الزر ⏭ أو ⏮ عنصر التحكم **EASY SEARCHING JOG** (مقبض البحث السهل).
- في وضع Preset (الضبط المسبق)، يمكنك استخدام الزر ⏭ أو ⏮ أو مفتاح التحكم في **EASY SEARCHING JOG** (مقبض البحث السهل) بالمنتج للبحث عن محطة الراديو التي تم تخزينها.

تحديد محطة مخزنة

يمكنك الاستماع إلى محطة راديو تم تخزينها كما يلي:

1. حدد **FM** بالضغط على زر **TUNER/AUX (موالف/إضافي)** بالمنتج ووحدة التحكم عن بعد.
2. اضغط على زر **TUNING MODE (وضع التوليف)** بوحدة التحكم عن بعد حتى يظهر **"PRESET"** (الضبط المسبق).
3. اضغط على زر ⏭،⏮ بالوحدة الرئيسية أو الزر **TUNING/ALBUM (توليف/ألبوم)** ∧ ، ∨ بوحدة التحكم عن بعد لتحديد رقم مطلوب مسبق الضبط.

أو

أدر مفتاح التحكم **EASY SEARCHING JOG (مقبض البحث السهل)** ناحية اليسار أو اليمين بالوحدة الرئيسية لتحديد المحطة المخزنة.

وظيفة الموقت

ضبط الساعة

لكل خطوة، تتوافر لديك بضع ثوانٍ لضبط الخيارات المطلوبة. وإذا تجاوزت تلك الفترة، فيجب أن تبدأ من البداية مرة أخرى.

1. اضغط مرتين على زر **TIMER SET (ضبط الموقت)** بوحدة التحكم عن بعد، وسيتم عرض **"CLOCK SET"** (ضبط الساعة).
2. اضغط على زر **ENTER (إدخال) ( )** بوحدة التحكم عن بعد، ستومض الساعة.
   - زيادة الساعات: **TUNING/ALBUM (توليف/ألبوم)** ∧
   - تقليل الساعات: **TUNING/ALBUM (توليف/ألبوم)** ∨
3. عند عرض الساعة الصحيحة، اضغط على زر **ENTER (إدخال) ( )** ثم ستومض الدقائق.
   - زيادة الدقائق: **TUNING/ALBUM (توليف/ألبوم)** ∧
   - تقليل الدقائق: **TUNING/ALBUM (توليف/ألبوم)** ∨
4. عند عرض الدقيقة الصحيحة، اضغط على زر **ENTER (إدخال) ( )** ثم يظهر **"TIMER PLAY SET (ضبط تشغيل الموقت)"** على الشاشة.

ضبط الموقت

يعمل الموقت على تمكينك من التبديل بين تشغيل المنتج أو إيقاف تشغيله في أوقات معينة تلقائيًا.

- قبل ضبط الموقت، تحقق من صحة الوقت الحالي.
- لكل خطوة، تتوافر لديك بضع ثوانٍ لضبط الخيارات المطلوبة. وإذا تجاوزت تلك الفترة، فيجب أن تبدأ من البداية مرة أخرى.
- إذا أردت تشغيل المنتج أو إيقاف تشغيله تلقائيًا، فيجب إلغاء الموقت بالضغط على الزر **TIMER ON/ OFF (تشغيل/ إيقاف تشغيل الموقت)**.

مثال: أنت ترغب في الاستيقاظ على الموسيقى كل صباح.

1. اضغط على زر **TIMER SET (ضبط الموقت)** حتى يظهر **TIMER PLAY SET (ضبط تشغيل الموقت)**.
2. اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: يتم عرض **ON TIME (وقت التشغيل)** لبضع ثوانٍ، ويمكنك ضبط وقت تشغيل الموقت.
3. اضبط وقت تشغيل المؤقت.
   أ اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لضبط الساعات.
   ب اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: تومض الدقائق.
   ج اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لضبط الدقائق.
   د اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: يظهر **OFF TIME (وقت إيقاف التشغيل)** لثوانٍ قليلة، ويمكنك الآن ضبط وقت إيقاف تشغيل الموقت.
4. اضبط وقت إيقاف تشغيل الموقت.
   أ اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لضبط الساعات.
   ب اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: تومض الدقائق.
   ج اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لضبط الدقائق.
   د اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: يتم عرض **VOLUME XX (مستوى الصوت XX)**، حيث يتطابق **XX** مع مستوى الصوت الذي تم ضبطه بالفعل.
5. اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لضبط مستوى الصوت واضغط على زر **ENTER (إدخال) ( )**.
   النتيجة: يتم عرض المصدر المراد تحديده.
6. اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لتحديد المصدر المطلوب كي يتم تشغيله عند تشغيل المنتج.

عند تحديد...	يجب أيضًا...
FM (راديو)	أ الضغط على زر **ENTER (إدخال) ( )**. ب تحديد محطة مسبقة الضبط عن طريق الضغط على زر **TUN-ING/ ALBUM (توليف/ألبوم)** ∧ أو ∨ .
CD (القرص المضغوط)	....قم بتحميل قرص مضغوط.
USB	.....قم بتوصيل جهاز USB.

7. اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: يتم عرض **TIMER REC SET (ضبط تسجيل الموقت)** (هل ترغب في التسجيل؟).
8. اضغط على زر **ENTER (إدخال) ( )** .
   النتيجة: يتم عرض **REC SET YES/NO (ضبط تشغيل/ إيقاف التسجيل)**، يمكنك الضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ لتحديد **REC YES (تشغيل التسجيل)** أو **REC NO (إيقاف التسجيل)**، ثم اضغط على زر **ENTER (إدخال)**.

1) عند تحديد **REC NO (إيقاف التسجيل)**، فسيتم إلغاء تسجيل موقت المواقف حتى عند ضبط تسجيل موقت المواقف بالفعل.

2) عند تحديد **REC YES (تشغيل التسجيل)**، يمكنك ضبط تسجيل موقت المواقف.

أ. اضغط على زر **ENTER (إدخال) ( )** .
النتيجة: يظهر **ON TIME (وقت التشغيل)** لعدة ثوانٍ، ويمكنك ضبط وقت تشغيل تسجيل موقتً المواقف.

ب. اضغط على زر **ENTER (إدخال) ( )** .
النتيجة: يظهر **OFF TIME (وقت الإيقاف)** لعدة ثوانٍ، ويمكنك ضبط وقت إيقاف تسجيل موقتً المواقف.

- أقصى وقت لتسجيل الموالف والموقت الإضافي هو 5 ساعات.
- إذا كانت أوقات تشغيل الموقت وإيقافه متطابقة، فستظهر كلمة **ERROR (خطأ)**.
- قد تستخدم الزرين ⏭، ⏮ بالمنتج بدلاً من زر **TUNING/ ALBUM (توليف/ألبوم)** ∧ أو ∨ للضبط في الخطوات من 3 إلى 8.
- إذا كان وقت التشغيل أو إيقاف التشغيل هو نفسه وقت تسجيل الموقت، يكون وقت التشغيل أو إيقاف التشغيل هو الفعال، ولا يتم تطبيق تسجيل الموقت.
- عند تشغيل الموقت التلقائي، قد تتطلب وظيفة القرص المضغوط أو USB خطوة إضافية كي يتم تنشيطها طبقًا للقرص (أو الجهاز). لذلك فمن الأفضل تحديد وظيفة الموالف بدلاً من ذلك.
- في حالة تحديد وضع القرص المضغوط أو USB وعدم وجود قرص أو USB في المنتج، فسيتم تغيير الوضع تلقائيًا إلى TUNER (الموالف).

إلغاء الموقت

بعد ضبط الموقت، سيبدأ التشغيل تلقائيًا كما هو موضح في الرسالة TIMER ON (تشغيل الموقت) المعروضة على الشاشة. وإذا لم تعد ترغب في استخدام الموقت، فيجب عليك إلغاؤه.

لإلغاء المؤقت، اضغط على زر **TIMER ON/OFF (تشغيل/ إيقاف الموقت)** مرة واحدة.
ولإعادة تشغيل الموقت، اضغط على الزر **TIMER ON/OFF (تشغيل/إيقاف الموقت)** مرة أخرى.

- عند تحديد وضع TIMER OFF (إيقاف الموقت)، لن تتوفر وظيفتا TIMER RECORDING (تسجيل الموقت) وTIME (الوقت).

وظيفة التسجيل

التسجيل الأساسي

يمكنك تسجيل صوت القرص المضغوط وUSB وبث الراديو والمصدر الخارجي على جهاز التخزين USB.

1. قم بتوصيل جهاز تخزين USB الخارجي الذي تريد تسجيله على USB (⇢ REC) بالمنتج.
   لا يتم تشغيل الموسيقى أثناء نسخ الملف.
2. قم بتشغيل قرص أو USB أو ضبط تردد الراديو أو توصيل المصدر الخارجي بالمنتج.

CD
- اضغط على **القرص المضغوط** بالمنتج لتحديد وظيفة القرص المضغوط.
- قم بإدخال قرص مضغوط برفق في فتحة القرص.
- استخدم زري تحديد القرص المضغوط (⏭ أو ⏮) لتحديد الأغنية المطلوبة.

TUNER (موالف)
- حدد FM بالضغط على زر **TUNER/AUX (موالف/إضافي)**.
- اضبط تردد الراديو الذي تريد تسجيله.

USB 1
- قم بتوصيلجهاز USB بما في ذلك جهاز USB الذي يشمل الملفات الأصلية بمقبس USB 1.
- اضغط على زر **USB** لتحديد USB 1.
- قم بتشغيل أغنية من USB 1.

المصدر الخارجي
- قم بتوصيل جهاز خارجي/مشغل MP3 بالمنتج.
- اضغط على زر **TUNER/AUX (موالف/إضافي)** لتحديد <AUX IN 1 (مدخل إضافي 1) أو AUX IN 2 (مدخل إضافي 2)>.
- قم بتشغيل أغنية من الجهاز الخارجي.

3. اضغط على زر **USB REC (تسجيل USB)** بوحدة التحكم عن بعد لبدء التسجيل.

CD
- يتم عرض رسالة تسجيل المسارات ويبدأ التسجيل على قرص CD.
- إذا أردت تسجيل كل مسارات القرص، فاضغط مع الاستمرار على زر **USB REC (تسجيل USB)**. ومن ثم، سيتم عرض رسالة اكتمال التسجيل على قرص CD.

RADIO (الراديو)
- يتم عرض رسالة تسجيل الموالف ويبدأ التسجيل.

CD-ROM/ USB
- تظهر رسالة "FILE COPY" (نسخ ملف) ويبدأ التسجيل.
- يمكنك أيضًا نسخ مجلد يتضمن ملفات MP3/WMA على جهاز USB 2. عند الضغط مع الاستمرار على زر USB REC (تسجيل USB) أثناء قيام النظام بتشغيل ملف MP3 أو WMA في المجلد، قد يظهر النظام رسالة "FOLDER COPY" (نسخ مجلد).
- عند تشغيل ملف MP3 أو WMA، سيتم نسخ الملف على جهاز USB. قد يظهر النظام رسالة "FILE COPY" (نسخ ملف).
  عند إتمام التسجيل، ستظهر رسالة "STOP" (إيقاف).
- في حالة وجود اسم الملف نفسه عند النسخ، تظهر رسالة "EXIST FILE" ويتم إلغاء الوظيفة.
- عند توصيل ميكروفون بالمنتج إذا قمت بالضغط على زر USB REC (تسجيل USB)، فسيتم تنشيط تسجيل MP3 وليس وظيفة النسخ.
- عند الضغط على زر USB REC (تسجيل USB) لفترة وجيزة ، يبدأ نسخ الملف وعند الضغط لفترة وجيزة على زر USB REC (تسجيل USB) لمدة ثوانٍ، يبدأ نسخ المجلد.

المصدر الخارجي
- يتم عرض رسالة تسجيل AUX ويبدأ التسجيل.

CD/USB1(MP3) & MIC
- يتم عرض رسالة تسجيل MP3 ويبدأ التسجيل.

4. لإيقاف التسجيل، اضغط على زر**STOP (إيقاف)** (■) وسيتم بعد ذلك إنشاء ملف MP3 وحفظه تلقائيًا.
5. بعد التسجيل، سيتم إنشاء دليل باسم "RECORDING /WMA/USB/CD-ROM) (CD-DA أو "CD COPY" أو "TUNER RECORDING" أو "AUX MP3) RECORDING" أو "MP3 RECORDING" في جهازك.

- يمكن نسخ ملف WMA/MP2 فقط ولا يمكن تسجيله.
- لا تقم بفصل USB أو سلك التيار المتردد أثناء التسجيل فقد يؤدي ذلك إلى تلف الملف.
- عند فصل جهاز USB أثناء التسجيل، سيتم إيقاف تشغيل المنتج وقد لا تقوم بحذف الملف الذي تم تسجيله، وفي هذه الحالة، يرجى توصيل جهاز USB بالكمبيوتر وعمل نسخة احتياطية من بيانات USB على الكمبيوتر أولاً ثم قم بتهيئة جهاز USB.
- إذا كانت ذاكرة USB غير كافية، فستظهر رسالة "NOT ENOUGH MEMORY" (ذاكرة غير كافية).
- يعمل التسجيل في حالة تهيئة جهاز USB أو محرك الأقراص الثابتة في نظام ملفات FAT. (نظام الملفات NTFS غير مدعوم.)
- عند استخدام وظيفة البحث عالي السرعة عن القرص المضغوط، يتعذر تسجيل القرص المضغوط.
- وفي بعض الأحيان، قد يكون وقت التسجيل أطول مع بعض أجهزة USB.
- في وضع البرنامج، لا يمكنك استخدام وظيفة تسجيل القرص المضغوط.
- عند تسجيل الكل، لا تعمل وظيفتا EQ (موازن الصوت) وGIGA SOUND (صوت جيجا) ويتغيران تلقائيًا إلى OFF (إيقاف).
- عند تسجيل القرص المضغوط، لا تعمل وظيفة REPEAT (تكرار) وتتغير تلقائيًا إلى OFF (إيقاف).
- عند استخدام وظيفة MIC (ميكروفون) أثناء تسجيل القرص المضغوط، سيتم تسجيل الصوت الصادر من الميكروفون.
- لا يمكنك تسجيل الراديو عند البحث أو عند عدم توفر الترددات في وضع Tuner (موالف).
- لاحظ أنه عند ضبط مستوى الإدخال على مرتفع للغاية عند تسجيل الموسيقى من جهاز خارجي عبر قناة AUX وUSB قد يتسبب ذلك في وجود ضوضاء في التسجيل. وفي هذه الحالة، قم بخفض مستوى صوت الجهاز الخارجي.

سرعة التسجيل

في كل مرة تقوم فيها بالضغط على زر CD REC SPEED (سرعة تسجيل القرص المضغوط) بوحدة التحكم عن بعد، تتغير سرعة التسجيل كما يلي:

RECORD SPEED x 1 (سرعة التسجيل × 1) ←
RECORD SPEED x 4 (سرعة التسجيل × 4)

- أثناء تسجيل الموالف أو المصدر الخارجي، لا يتم دعم سرعة التسجيل.
- عندما تحدد RECORD SPEED x 4 (سرعة التسجيل 4 x)، لن يخرج الصوت.
- عند توصيل الميكروفون، سيكون لديك وضع سرعة تسجيل واحد فقط: RECORD SPEED x 1 (سرعة التسجيل × 1)
- أثناء التسجيل، عند فصل الميكروفون، سيتوقف التسجيل، حتى عند إعادة توصيل الميكروفون، فإنه سيتوقف.

التأثير الصوتي الخاص

تحديد وضع EQ (موازن الصوت)

يدعم المنتج إعدادات موازن الصوت مسبقة الضبط بين الترددات العالية والمنخفضة كي تكون متناغمة مع نوع الموسيقى الحالية.

1. اضغط على زر **EQ (موازن الصوت)** .
في كل مرة تقوم فيها بالضغط على هذا الزر، سيتحول وضع الصوتكما يلي:

OFF (إيقاف) ← FLAT (فلات) ← ARABIC MUSIC ← PERSIAN MUSIC ← PARTY (حفلة) ← POP (بوب) ← HIP HOP (هيب هوب) ← ROCK (روك) ← JAZZ (جاز) ← CLASSIC (كلاسيكي) ← ELECTRONIC (إلكترونية) ← MP3 ENHANCER (محسن MP3) ← VIRTUAL SOUND (الصوت الظاهري) ← USER EQ (موازن صوت المستخدم)

2. عند رغبتك في ضبط وضع **USER EQ (موازن صوت المستخدم)**، حدد **USER EQ (موازن صوت المستخدم)**، ثم اضغط على زر **ENTER (إدخال)**. يمكنك ضبط مستوى **BASS (الجهير)** و**MID (متوسط)** و**TREB (ثلاثي)**.

النتيجة: يومض مستوى BASS (الجهير) (الرقم الأيسر).
اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ للتحديد من 06- إلى 06.
اضغط على زر **ENTER (إدخال)** .
النتيجة: يومض مستوى MIDDLE (المتوسط) (الرقم المتوسط).
اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ للتحديد من 06- إلى 06.
اضغط على زر **ENTER (إدخال)** .
النتيجة: يومض مستوى TREBLE (ثلاثي) (الرقم الأيمن).
اضغط على زر **TUNING/ALBUM (توليف/ألبوم)** ∧ أو ∨ للتحديد من 06- إلى 06.
اضغط على زر **ENTER (إدخال)** .
النتيجة: اكتمل الإعداد.

- عند تسجيل الكل، لا تعمل وظيفة EQ (موازن الصوت) ويتحول EQ (موازن الصوت) تلقائيًا إلى وضع "OFF" (إيقاف).
- في حالة عدم الضغط على أي زر خلال 8 ثوانٍ، سيتم إلغاء الإعدادات تلقائيًا وسيتم حفظ الإعدادات السابقة.
- قد يختلف وضع EQ (موازن الصوت) حسب منطقتك.

استخدام وضع FOOTBALL (كرة القدم)

يمكنك تحديد وضع كرة القدم مباشرة للاستماع إلى بث الرياضة بواقعية.

1. اضغط على زر **FOOTBALL MODE (وضع كرة القدم)** بالمنتج.
في كل مرة تقوم فيها بالضغط على هذا الزر، سيتحول وضع الصوت كما يلي:

FOOTBALL OFF (إيقاف كرة القدم) ←
FOOTBALL MODE 1 (وضع كرة القدم 1) ←
FOOTBALL MODE 2 (وضع كرة القدم 2)

- قد يختلف وضع FOOTBALL (كرة القدم) حسب منطقتك.

وظيفة GIGA SOUND (صوت جيجا)

يتم تزويد المنتج بوظيفة وضع GIGA SOUND (صوت جيجا). تعمل وظيفة وضع GIGA SOUND (صوت جيجا) على تكبير الجهير وتحسين الدرجة العالية أو الجهير مرتين لرفع الصوت القوي الحقيقي.

1. اضغط على زر **GIGA SOUND BEAT (إيقاع صوت جيجا)** بالوحدة الرئيسية أو زر **GIGA (جيجا)** بوحدة التحكم عن بعد. في كل مرة تقوم فيها بالضغط على هذا الزر، سيتحول الصوت كما يلي:

GIGA SOUND BEAT (إيقاع صوت جيجا) ←
GIGA SOUND OFF (إيقاف صوت جيجا)

2. لإلغاء هذه الوظيفة، اضغط على زر **GIGA SOUND BEAT (إيقاع صوت جيجا)** حتى تظهر رسالة **"OFF"** (إيقاف).

- قد يختلف وضع **GIGA SOUND (صوت جيجا)** حسب منطقتك.

وظيفة BEAT WAVING (تقلب الإيقاعات)

يمكنك تحويل وضع Speaker LED (لمبة السماعة) حسب ما تفضل.

1. في كل مرة تقوم فيها بالضغط على زر **BEAT WAVING (تقلب الإيقاعات)** بالمنتج، سيتغير وضع شاشة Speaker LED (لمبة السماعة) كما يلي:

PARTY 1 (حفلة 1) ← PARTY 2 (حفلة 2) ← FUN 1 (مرح 1) ← FUN 2 (مرح 2) ← PURE (صافٍ) ← FRESH (جديد) ← LOVE (حب) ← JOY (فرحة) ← SUNSET (غروب) ← SUNRISE (شروق) ← NATURE 1 (الطبيعة 1) ← NATURE 2 (الطبيعة 2) ← WAVE 1 (موجة 1) ← WAVE 2 (موجة 2) ← AURORA (فجر) ← OFF (إيقاف)

- عند تحديد **BEAT WAVING OFF (إيقاف تقلب الإيقاعات)**، سيتم إيقاف تشغيل جميع مصابيح لمبة السماعة.

وظيفة DJ BEAT (إيقاع دي جي)

تعمل على ضبط التأثير الصوتي FLANGER (فلانجر) و PANNING (التحريك) وCHORUS (كورس) وWAHWAH (واهواه) ويكون مستوى كل تأثير قابلاً للضبط.

النطاق المعين هو [15- ~ 15+] وتكون قيمة الإعداد الأولي 0.

FLANGER (فلانجر) : يعمل على إنشاء الاهتزاز المساوي لإقلاع/هبوط الطائرة النفاثة.

PANNING (التحريك) : يعمل على زيادة إخراج السماعة اليسرى/اليمنى بالتناوب وكأنه يتحرك من جانب إلى آخر.

WAHWAH (واهواه) : تشبه 'Wah~ Wah ~Wah~'

CHORUS (كورس) : يعمل على إنشاء اهتزاز مثل غناء الكورس.

1. لضبط التأثير المطلوب، اضغط على أحد الأزرار **FLANGER (فلانجر)**، **PANNING (التحريك)**، **CHORUS (كورس)**، **WAHWAH (واهواه)** بالمنتج.
   - تضيء اللمبة الزرقاء الموجودة حول الزر ذي الصلة وزر **DJ BEAT (إيقاع دي جي)**.
   - يمكنك التحكم في مستوى التأثير الذي تم ضبطه على Volume Jog (مقبض مستوى الصوت).
     للتحكم في مستوى الصوت، اضغط على زر **DJ BEAT (إيقاع دي جي)**.
   - لإلغاء التأثير المعين، اضغط على الزر ذي الصلة مرة أخرى.
   - لتغيير التأثير المعين، اضغط على زر التأثير المطلوب.
   - يمكن ضبط تأثير **PANNING (التحريك)** مع تأثير **FLANGER (فلانجر)** و**CHORUS (كورس)** و **WAHWAH (واهواه)** بشكل مزدوج.
   - لضبط تأثير **PANNING (التحريك)** بشكل مزدوج، اضغط على زر **PANNING (التحريك)** عند إعداد تأثير آخر أو اضغط على زر تأثير آخر عند تطبيق تأثير **PANNING (التحريك)**.
   - استخدم Volume JOG (مقبض مستوى الصوت) للتحكم في مستوى التأثير الذي تم إعداده في النهاية.
   - للتحكم في مستوى التأثير الذي تم ضبطه فيما سبق، اضغط على زر التأثير الذي تم إعداده في النهاية وقم بإلغاء التأثير الأخير أولاً.

وظيفة صوت بدء التشغيل

عند ضبط صوت بدء التشغيل، يمكنك الشعور بالصوت الواضح للمنتج عند بدء تشغيله.

1. اضغط على زر **GIGA SOUND BEAT (إيقاع صوت جيجا)** بالمنتج أو زر **GIGA (جيجا)** بوحدة التحكم عن بعد لفترة طويلة.
   - تظهر قائمة **BOOTING SOUND (صوت بدء التشغيل)** على لوحة العرض.
2. اضغط على زر **GIGA SOUND BEAT (إيقاع صوت جيجا)** بالمنتج أو زر **GIGA (جيجا)** بوحدة التحكم عن بعد لفترة طويلة ليتم **ON (تشغيل)** أو **OFF (إيقاف) BOOTING SOUND (صوت بدء التشغيل)**.

استكشاف الأخطاء وإصلاحها

استكشاف الأخطاء وإصلاحها

راجع المخطط التالي إذا لم يعمل هذا المنتج بشكل سليم. إذا كانت المشكلة التي تواجهك غير مدرجة فيما يلي أو إذا كانت التعليمات التالية لا تقدم المساعدة المطلوبة، فيرجى إيقاف تشغيل المنتج وفصل كابل الطاقة والاتصال بأقرب وكيل معتمد أو أقرب مركز خدمة تابع لشركة Samsung Electronics.

الأعراض	الفحص/طريقة الإصلاح
لا يمكن إخراج القرص.	• هل تم توصيل كابل الطاقة بإحكام بمنفذ التيار الكهربي؟ • افصل الطاقة ثم أعد تشغيله مرة أخرى.
لا يبدأ التشغيل مباشرةً عند الضغط على الزر Play/Pause (تشغيل/إيقاف تشغيل).	• هل تستخدم قرصًا مشوهًا أو به خدوش على السطح؟ • امسح القرص لتنظيفه.
لا يتم إصدار صوت.	• لا يُسمع صوت أثناء التشغيل السريع والتشغيل البطيء والتشغيل بالحركة التدريجية. • هل تم توصيل السماعات بشكل صحيح؟ هل تم تخصيص إعداد السماعات بشكل صحيح؟ • هل يوجد بالقرص تلف بالغ؟
وحدة التحكم عن بُعد لا تعمل.	• هل تم تشغيل وحدة التحكم عن بعد داخل نطاق تشغيل الزاوية والمسافة؟ • هل يوجد تسريب بالبطاريات؟
• المنتج لا يعمل. (مثال: انقطاع التيار الكهربي أو تعطل مفتاح اللوحة الأمامية أو سماع ضوضاء غريبة.) **• المنتج لا يعمل بشكل عادي.**	• مع ظهور الرسالة "NO DISC" (لا يوجد قرص) على شاشة المنتج وعدم وجود قرص في فتحة الأقراص، اضغط مع الاستمرار على الزر **STOP** (إيقاف) (■) بالمنتج لأكثر من 5 ثوانٍ. يؤدي استخدام وظيفة **RESET** (إعادة الضبط) إلى مسح جميع الإعدادات المخزنة. لا تستخدم هذا إلا عند الضرورة.
لا يمكن استقبال البث اللاسلكي.	• هل تم توصيل الهوائي بشكل صحيح؟ • إذا كانت إشارة إدخال الهوائي ضعيفة، فيجب تركيب هوائي FM خارجي في منطقة تمتاز بجودة الاستقبال.

المواصفات

المواصفات			
عام	الوزن	الوحدة الأساسية	8 كجم
		السماعة	70 كجم
	الأبعاد	الوحدة الأساسية	588 (عرض) × 238 (ارتفاع) × 388 (عمق)
		السماعة	588 (عرض) × 882 (ارتفاع) × 577 (عمق)
	نطاق درجة حرارة التشغيل		5+ درجات مئوية إلى 35+ درجة مئوية
	نطاق درجة الرطوبة		من 10 % إلى 75 %
موالف FM	نسبة الإشارة/الضوضاء		55 ديسيبل
	الحساسية المستخدمة		10 ديسيبل
	التشوه التوافقي الكلي		1 %
قرص مضغوط	القرص المضغوط: 12 سم (COMPACT DISC) (القرص المدمج)		سرعة القراءة : 4.8 إلى 5.6 دقيقة/ثانية.
			أقصى وقت للتشغيل : 74 دقيقة.
مكبر الصوت	إخراج السماعة الأمامية		640 وات/قناة (4 أوم)
	إخراج مكبر الصوت		640 وات/قناة (4 أوم)
	نطاق التردد		22 هرتز إلى 20 كيلو هرتز
	نسبة الإشارة/الضوضاء		65 ديسيبل
	فصل القناة		60 ديسيبل
	حساسية الإدخال		800(AUX) ملي فولت

*: المواصفات الاسمية

- تحتفظ شركة Samsung Electronics Co., Ltd بالحق في تعديل المواصفات دون إخطار.
- قيم الوزن والأبعاد تقريبية.
- التصميم والمواصفات عرضة للتغيير دون إشعار مسبق.
- للاطلاع على معلومات حول مصدر الطاقة واستهلاك الطاقة، راجع الملصق المرفق بالمنتج.

الاتصال بسامسونج حول العالم

إذا كان لديك أيةاستفسارات أو ملاحظات تتعلق بمنتجات سامسونج، يرجى الاتصال بمركزخدمةالعملاء التابع لسامسونج.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) (021) 56997777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th
TAIWAN	0800-32-9999	www.samsung.com/tw
VIETNAM	1800 588 889	www.samsung.com
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786	www.samsung.com
ALGERIA	0800 100 100	www.samsung.com/n_africa
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/
TUNISIA	80-1000-12	www.samsung.com/n_africa
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant (English)
SYRIA	18252273	www.samsung.com/Levant (English)
IRAN	021-8255	www.samsung.com
MOROCCO	080 100 2255	www.samsung.com
SAUDI ARABIA	920021230	www.samsung.com/sa
TURKEY	444 77 11	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/
GHANA	0800-10077 0302-200077	
COTE D' IVOIRE	8000 0077	www.samsung.com/africa_fr/
SENEGAL	800-00-0077	
CAMEROON	7095- 0077	
KENYA	0800 545 545	www.samsung.com
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860-SAMSUNG (726-7864)	www.samsung.com
BOTSWANA	8007260000	www.samsung.com
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	